


SOLAR WATER PUMP FLEXIBLE TYPE SCREW IMPELLER

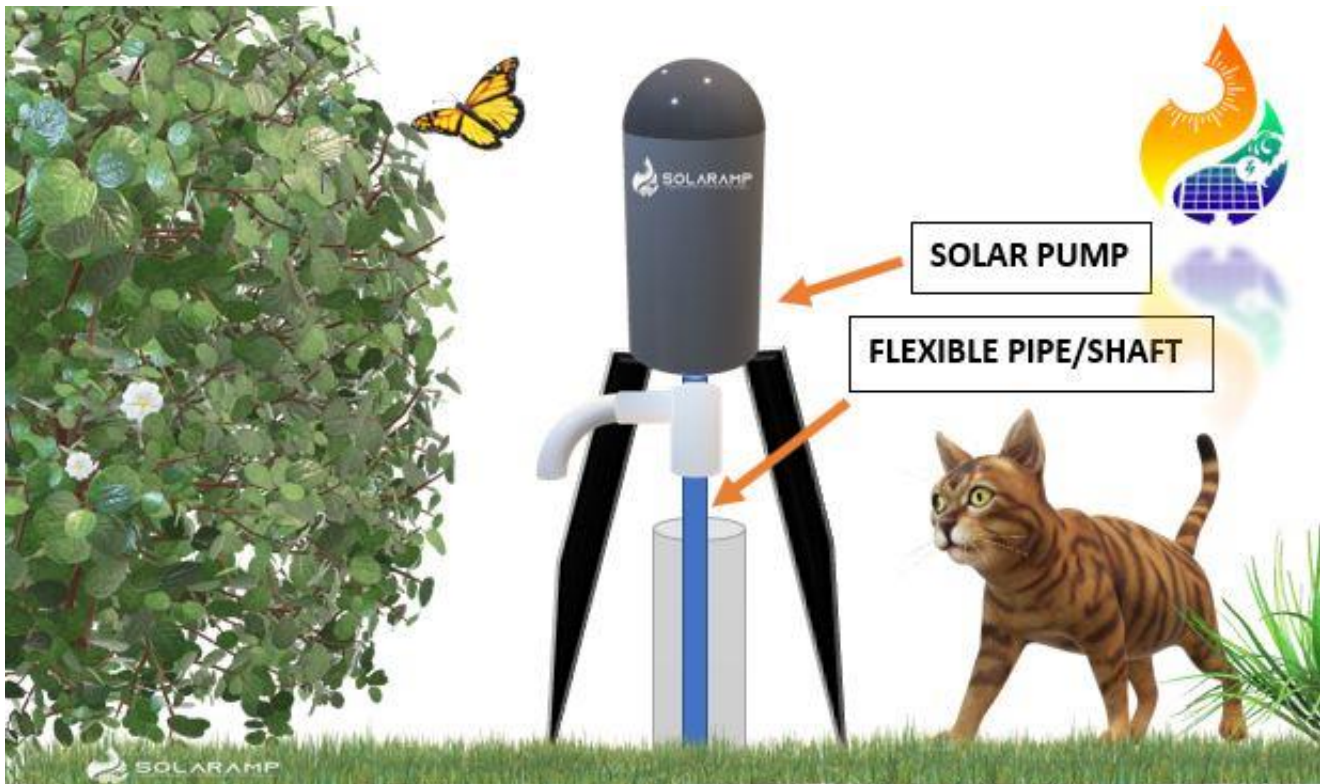

OPTION 1:

- a. Get the total sounding/level of water then divide into 2.

For example: Total sounding/level of water is 20 meters / 2 = 10 meters (in 10 meters from the bottom you can position the screw impeller here)

- b. Get the total height of your deep well.

For example: Height of deep well is 36 meters (6 pipes)

- c. Measure the flexible hose start from impeller to 26 meters then cut out the excess flexible hose/shaft. You only need 26 meters of flexible hose in order to position your impeller around 10 meters from the bottom.

