

# **Operation Manual**

PV100 Series
Solar Pumping Inverter

# Contents

| Contents1   |
|---|
| 1 Safety precautions2   |
| 1.1 Safety definition2  |
| 1.2 Warning symbols2  |
| 1.3 Safety guidelines   |
| 2 Product overview5   |
| 2.1 Unpacking inspection5   |
| 2.2 Name plate5   |
| 2.3 Type designation key5   |
| 2.4 Product specifications6   |
| 2.5 Rated specifications7   |
| 3 Installation guidelines8  |
| 3.1 Mechanical installation8  |
| 3.2 Standard wiring10   |
| 4 Keypad operation procedure15                                      |
| 4.1 Keypad introduction15   |
| 4.2 Keypad displaying17   |
| 4.3 Keypad operation ————————————————————————————————————           |
| 5 Commissioning guidelines ————————————————————————————————————     |
| 5.1 Inspection before operation 21                                  |
| 5.2 Trial run ———————————————————————————————————                   |
| 5.3 Parameter settings 21   |
| 5.4 Advanced settings ————————————————————————————————————          |
| 6 Function parameters 23  |
| 6.1 Common function parameters for solar pumping inverter control23 |
| 6.2 Parameters of special functions 42                              |
| 7 Fault diagnosis and solution ———————————————————————————————————— |
| Appendix A Options and use 65                                       |
| A.1.1 Power cables 65   |
| A.1.2 Control cables 65   |
| A.2 Reactors 66   |
| Appendix B Recommended solar modules 67                             |
| B.1 Recommended configuration for solar pumping inverters67         |
| Appendix C Dimension drawings 68                                    |
| C.1 Dimensions of 4-37kW models                                     |
| O. I Difficultions of 4-37kW fillodels                              |
| Appendix D Further information 69                                   |
| D 1 Product and service inquiries                                   |

# 1 Safety precautions

Please read this manual carefully and follow all safety precautions before moving, installing, operating and servicing the inverter. If ignored, physical injury or death may occur, or damage may occur to the devices.

If any physical injury or death or damage to the devices occurs for ignoring to the safety precautions in the manual, our company will not be responsible for any damages and we are not legally bound in any manner.

## 1.1 Safety definition

Danger: Serious physical injury or even death may occur if not follow

relevant requirements

Warning: Physical injury or damage to the devices may occur if not follow

relevant requirements

Note: Physical hurt may occur if not follow relevant requirements

Qualified People working on the device should take part in professional electricians: electrical and safety training, receive the certification and be

familiar with all steps and requirements of installing, commissioning, operating and maintaining the device to avoid

any emergency.

#### 1.2 Warning symbols

Warnings caution you about conditions which can result in serious injury or death and/or damage to the equipment, and advice on how to avoid the danger. Following warning symbols are used in this manual:

| Symbols          | Name                       | Instruction  | Abbreviation |  |
|------------------|----------------------------|--|--------------|--|
| A Danger         | Danger                     | Serious physical injury or even death may occur if not follow the relative requirements    |              |  |
| <b>⚠</b> Warning | Warning                    | Physical injury or damage to the devices may occur if not follow the relative requirements |              |  |
| Do not           | Electrostatic<br>discharge | Damage to the PCBA board may occur if not follow the relative requirements                 |              |  |
| ▲ Hot sides      | Hot sides                  | Sides of the device may become hot. Do not touch.  |              |  |
| Note             | Note                       | Physical hurt may occur if not follow the relative requirements                            | Note         |  |

cross sectional area).

# 1.3 Safety guidelines

|          | ☐ Only qualified electricians are allowed to operate on the inverter. ☐ Do not carry out any wiring and inspection or changing components when                                    |   |                             |   |  |  |
|----------|---|---|-----------------------------|---|--|--|
|          |   | the power supply is applied. Ensure all input power supply is disconnected  |                             |   |  |  |
|          |   | before wiring and checking and always wait for at least the time designated |                             |   |  |  |
|          | A   | on the inverter or until the DC bus voltage is less than 36V. Below is the  |                             |   |  |  |
|          |   |   | waiting time:               |   |  |  |
|          | Inverter model Minimum waiting time   |   |                             |   |  |  |
|          |   | 1PH 220V  | 0.4kW-2.2kW                 | 5 minutes                                 |  |  |
|          |   | 3PH 220V  | 4kW-7.5kW                   | 5 minutes                                 |  |  |
|          |   | 3PH 380V  | 0.75kW-37kW                 | 5 minutes                                 |  |  |
|          | $\wedge$  |   |                             | ; otherwise fire, electric shock or other |  |  |
|          |   | injury may c  | occur.                      |   |  |  |
|          | <u>M</u>  | ☐ The base of avoid hurt.   | f the radiator may becon    | ne hot during running. Do not touch to    |  |  |
|          |   |   | al parts and component      | s inside the inverter are electrostatic.  |  |  |
|          |   |   |                             | ctrostatic discharge during relevant      |  |  |
| 4        |   | operation.  | diomonio to avoia cio       | on column districting relevant            |  |  |
| 1.3.1    | 1 Deliver   | y and installation  | า                           |   |  |  |
|          |   | ☐ Please inst   | all the inverter on fire-re | tardant material and keep the inverter    |  |  |
|          |   | away from   | combustible materials.      | ·   |  |  |
|          | $\wedge$  | ☐ Do not ope  | rate on the inverter if the | re is any damage or components loss       |  |  |
|          | <u> </u>  | to the inver  |                             |   |  |  |
|          |   |   | ch the inverter with wet it | ems or body, otherwise electric shock     |  |  |
| <u> </u> |   | may occur.  |                             |   |  |  |
| Note     |   |   |                             | 4   |  |  |
| Ш        | Select appropriate moving and installing tools to ensure a safe and normal running of<br>the inverter and avoid physical injury or death. For physical safety, the erector should |   |                             |   |  |  |
|          | take some mechanical protective measurements, such as wearing safety shoes and  |   |                             |   |  |  |
|          | working uniforms.   |   |                             |   |  |  |
|          | · · · · · · · · · · · · · · · · · · ·   |   |                             |   |  |  |
|          | ,   |   |                             |   |  |  |
|          | •   |   |                             |   |  |  |
|          | $\ \square$ The inverter cannot meet the requirements of low voltage protection in IEC61800-5-1 if  |   |                             |   |  |  |
|          | the altitude of installation site is above 2000m.   |   |                             |   |  |  |
|          | ,   |   |                             |   |  |  |
|          | proper techniques and ensure the grounding resistor is less than 10 . The conductivity  |   |                             |   |  |  |

of PE grounding conductor is the same as that of the phase conductor (with the same

|         | input    | d (-) are DC power supply input terminals. R, S and T (L,N) are AC power supply terminals. U, V and W are output terminals. Please connect the input powers and motor cables with proper techniques; otherwise the damage to the inverter  |
|---------|----------|--|
|         | may c    | occur.   |
| 1.3.2 ( | Commi    | ssion ing and running  |
| 4       | A        | <ul> <li>□ Disconnect all power supplies applied to the inverter before the terminal wiring and wait for at least the designated time after disconnecting the power supply.</li> <li>□ High voltage is present inside the inverter during running. Do not carry out any operation except for the keypad setting.</li> <li>□ The inverter cannot be used as "Emergency-stop device".</li> <li>If the inverter is used to break the motor suddenly, a mechanical braking device should be provided.</li> </ul> |
| Note:   |          |  |
|         |          | ot switch on or off the input power supply of the inverter frequently.   |
|         |          | verters that have been stored for a long time, check and fix the capacitance and   |
|         | •        | run it again before utilization.   |
|         |          | r the front board before running, otherwise elect ric shock may occur.   |
| 1.3.3 1 | viainter | nanc e and replacement of components   |
| 4       | A        | <ul> <li>☐ Only qualified electricians are allowed to perform the maintenance, inspection, and components replacement of the inverter.</li> <li>☐ Disconnect all power supplies to the inverter before the terminal wiring.</li> <li>Wait for at least the time designated on the inverter after disconnection.</li> <li>☐ Take measures to avoid screws, cables and other conductive materials to fall into the inverter during maintenance and component replacement.</li> </ul>                           |
| Note:   |          |  |
|         |          | e select proper torque to tigh ten screws.   |
|         |          | the inverter, parts and components away from combustible materials during  |
|         |          | enance and component replacement.  |
|         |          | ot carry out any isolation voltage-endurance test on the inverter and do not   |
|         |          | ure the control circuit of the inverter by megameter.  |
| 1.3.4 8 | Scrap t  | reatment   |
| 4       | <u>^</u> | There are heavy metals in the inverter. Deal with it as industrial effluent.   |
| X       | Ž        | When the life cycle ends, the product should enter the recycling system. Dispose of it separately at an appropriate collection point instead of placing it in the normal waste stream.   |

#### 2 Product overview

# 2.1 Unpacking inspection

Check as follows after receiving products:

- 1. Check that there are no damage and humidification to the package.
- 2. Check the information on the type designation label on the outside of the package to verify that the drive is of the correct typ.
- 3. Check that there are no signs of water in the package and no signs of damage or breach to the inverter.
- 4. Check the information on the type designation label on the outside of the package to verify that the name plate is of the correct type.
- 5. Check to ensure the accessories (including user's manual and control keypad) inside the device is complete.

## 2.2 Name plate

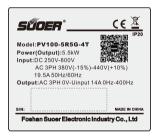


Figure 2-1 Name plate

Note: This is the example of PV100 standard products and the CE\TUV\Ip20 certifications are marked according to the reality.

# 2.3 Type designation key

The type designation contains information on the inverter. The user can find the type designation on the type designation label attached to the inverter or the simple name plate.

| Key                  | Sign | Description                | Remarks  |
|----------------------|------|----------------------------|--|
| Product abbreviation | 1    | Product<br>abbreviation    | PV 100 is short for Photovoltaic .   |
| Rated power          | 2    | Power range<br>+ Load type | 5R5G—5.5kW<br>G—Constant torque load   |
| Voltage<br>degree    | 3    | Voltage<br>degree          | 4T: AC 3PH 380V(-15%)~440(+10%) 2T: AC 3PH 220V(-15%)~240(+10%) S: AC 1PH 220V(-15%)~240(+10%) SS: AC 1PH input/output 220V(-15%)~ 240(+10%) |
| Protection<br>level  | 4    | Protection<br>level        | Protection level.  2—Ip20  The protection level of a standardinverter is IP20, butthis field is not displayed.                               |

# 2.4 Product specifications

| Model                 | -SS                 | -S      | -2T           | -4T           |
|-----------------------|---------------------|---------|---------------|---------------|
| AC innut valtage (V)  | 220(-15%)~240(+10%) |         | 220(-15%)~240 | 380(-15%)~440 |
| AC input voltage (V)  | (1PH)               |         | (+10%) (3PH)  | (+10%) (3PH)  |
| Max. DC voltage (V)   | 440                 | 440     | 440           | 800           |
| Start -up voltage (V) | 200                 | 200     | 200           | 300           |
| Lowest working        | 450                 | 450     | 450           | 050           |
| voltage (V)           | 150                 | 150     | 150           | 250           |
| Recommended DC        |                     |         |               |               |
| input voltage range   | 200~400             | 200~400 | 200~400       | 300~750       |
| (V)                   |                     |         |               |               |
| Recommended MPP       | 220                 | 330     | 330           | 550           |
| voltage (V)           | 330                 | 330     | 330           | 550           |

# 2.5 Rated specifications

| Series              | Model          | Rated output power ( Kw) | Rated input current (A) | Rated output current (A) |
|---------------------|----------------|--------------------------|-------------------------|--------------------------|
|                     | PV100 -0R4G-SS | 0.4                      | 6.5                     | 4.2                      |
|                     | PV100 -0R7G-SS | 0.75                     | 9.3                     | 7.2                      |
| -SS                 | PV100 -1R5G-SS | 1.5                      | 15.7                    | 10.2                     |
| (0.4-2.2 Kw)        | PV100 -2R2G-SS | 2.2                      | 24                      | 14                       |
|                     | PV100-004G-SS  | 4                        | 30                      | 23                       |
|                     | PV100-5R5G-SS  | 5.5                      | 50                      | 32                       |
|                     | PV100-0R4G-S   | 0.4                      | 6.5                     | 2.5                      |
| -S                  | PV100-0R7G-S   | 0.75                     | 9.3                     | 4.2                      |
| (0.4-2.2 kW)        | PV100-1R5G-S   | 1.5                      | 15.7                    | 7.5                      |
|                     | PV100 2R2G S   | 2.2                      | 24                      | 10                       |
| 0.7                 | PV100-004G-2T  | 4                        | 17                      | 16                       |
| -2T<br>(4-7.5kW)    | PV100 -5R5G-2T | 5.5                      | 25                      | 20                       |
| (4-7.3KVV)          | PV100 -7R5G-2T | 7.5                      | 33                      | 30                       |
|                     | PV100 -0R7G-4T | 0.75                     | 3.4                     | 2.5                      |
|                     | PV100 -1R5G-4T | 1.5                      | 5.0                     | 4.2                      |
|                     | PV100 -2R2G-4T | 2.2                      | 5.8                     | 5.5                      |
|                     | PV100-004G-4T  | 4.0                      | 13.5                    | 9.5                      |
|                     | PV100 -5R5G-4T | 5.5                      | 19.5                    | 14                       |
|                     | PV100 -7R5G-4T | 7.5                      | 25                      | 18.5                     |
| -4T<br>(0.75-110kW) | PV100-011G-4T  | 11                       | 32                      | 25                       |
| (U.75-11UKVV)       | PV100-015G-4T  | 15                       | 40                      | 32                       |
|                     | PV100-018G-4T  | 18.5                     | 47                      | 38                       |
|                     | PV100-022G-4T  | 22                       | 51                      | 45                       |
|                     | PV100-030G-4T  | 30                       | 70                      | 60                       |
|                     | PV100-037G-4T  | 37                       | 80                      | 75                       |
|                     | PV100-045G-4T  | 45                       | 94                      | 92                       |
|                     | PV100-055G-4T  | 55                       | 128                     | 115                      |
|                     | PV100-075G-4T  | 75                       | 160                     | 150                      |
|                     | PV100-090G-4T  | 90                       | 190                     | 180                      |
|                     | PV100-110G-4T  | 110                      | 225                     | 215                      |

# 3 Installation guidelines

The chapter describes the mechanical installation and electric installation.

| A | <ul> <li>□ Only qualified electricians are allowed to carry out what described in this chapter. Please operate as the instructions in Safety precautions. Ignoring these may cause physical injury or death or damage to the devices.</li> <li>□ Ensure the power supply of the inverter is disconnected during the operation. Wait for at least the time designated after the disconnection if the power supply is applied.</li> <li>□ The installation and design of the inverter should be complied with the requirement of the local laws and regulations in the installation site. If the installation infringes the requirement, our company will exempt from any responsibility. Additionally, if users do not comply with the suggestion, some damage beyond the assured maintenance range may occur.</li> </ul> |
|---|--|
|   | ☐ The installation and design of the inverter should be complied with the requirement of the local laws and regulations in the installation site. If the installation infringes the requirement, our company will exempt from any  |

#### 3.1 Mechanical installation

## 3.1.1 Installation environment

The installation environment is the safeguard for a full performance and long-term stable functions of the inverter. Check the installation environment as follows:

| Environment                | Conditions   |  |  |  |
|----------------------------|--|--|--|--|
| Installation site          | Indoor   |  |  |  |
| Environment<br>temperature | The ambient temperature of inverter is -10°C-50°C while air temperature change should be less than 0.5°C per minute.  The inverter will be derated once ambient temperature exceeds 40°C. It is not recommended to use the inverter if ambient temperature is above 50°C.  To ensure reliability, do not use the inverter if the ambient temperature changes frequently.  Provide cooling fan or air conditioner to control the internal ambient temperature below the required one if the inverter is used in a close space such as in the control cabinet.  When the temperature is too low, if the inverter needs to restart to run after a long stop, it is necessary to provide an external heating device to increase the internal temperature, otherwise damage to the devices may occur. |  |  |  |
| Humidity                   | RH≤90%No condensation is allowed.  |  |  |  |
| Storage temperature        | -40°C $\sim$ +70°C . The temperature change rate is less than 1°C/minute.  |  |  |  |

| Environment                         | Conditions  |
|-------------------------------------|---|
| Running<br>environment<br>condition | The installation site of the inverter should: Keep away from the electromagnetic radiation source; Keep away from contaminative air, such as corrosive gas, oil mist and flammable gas; Ensure foreign objects, such as metal power, dust, oil, water cannot enter into the inverter(do not install the inverter on the flammable materials such as wood); Keep away from direct sunlight, oil mist, steam and vibration environment. |
| Pollution                           | Pollution degree 2  |
| Altitude                            | Below 1000m If the altitude is above 1000m, please derate 1% for every additional 100m.   |
| Vibration                           | $\leq 5.8 \text{m/s}^2 (0.6 \text{g})$  |
| Installation direction              | The inverter should be installed on an upright position to ensure sufficient cooling effect.  |

#### Note:

- PV100 series inverters should be installed in a clean and ventilated environment according to enclosure classification.
- Cooling air must be clean, free from corrosive materials and electrically conductive dust.
- 3.1.2 Installation direction

The inverter may be installed on the wall or in a cabinet.

The inverter needs be installed in the vertical position. Check the installation site according to the requirements below. See Appendix C Dimension drawings for frame details.

3.1.3 Installation manner

## Figure 3-1 Installation manners

(2) The inverters support wall mounting and flange mounting.



Figure 3.2 installation manners

- 1) Mark the locations of installation holes. For details about the holes, see the inverter dimension diagram in the appendix.
- 2) Fix the screws
- 3) Lean the inverter against the wall.
- 4) Fasten the tightening screws on the wall.

Note: The minimum space of A and B is 100mm. H is 36.6mm and W is 35.0mm.

- 3.2 Standard wiring
- 3.2.1 Terminals of main circuit

The figure below shows the standard wiring of inverter.


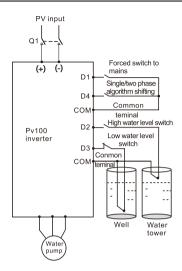


Figure 3-3 Standard wiring diagram

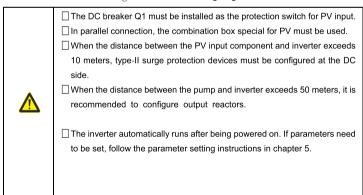

| Terminal          | Name               | Function  |  |  |
|-------------------|--------------------|---|--|--|
| R, S, T<br>(L, N) | AC input           | 3PH (1PH) AC input terminals, connected to the grid   |  |  |
| (+), (-)          | PV input           | Solar cell panel input terminals  |  |  |
| U, V, W           | Inverter<br>output | 3PH/1PH AC output terminals, connected to the pump motor  Note: 1PH motors must connect to terminals U and W. |  |  |

Terminals of main circuit

grounding Description for -SS single-phase output models

(4)


Safetv

1) Generally, the output terminals U and W of the inverter connect to the phase cables of the single-phase motor.


must be grounded

Safety protection grounding terminal. Each inverter

2) If the single-phase pump cannot be started, the two-phase control method must be used, and the start-up and running capacitors (if any) of the motor must be removed. The figure below shows the internal wiring of the common single-phase motor. In the figure, L1, L2, C1, and C2 indicate the running winding, start-up winding, running capacitor, and start-up capacitor. When the motor speed exceeds 75% of the rated speed, the start-up capacitor is switched off.

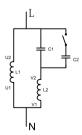

Internal wiring of the single-phase motor winding after removing the starting and running capacitor:

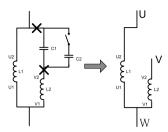

U1 and V1 are the common terminals of the windings. Connect them to the output terminal W of the solar pumping inverter. Connect U2 to the output terminal U of the inverter. Connect V2 to the output terminal V of the inverter. (Note: Use the screws equipped with the inverter.) Connect S4 of the inverter to COM in short circuited manner.

#### 3.2.2 Terminals of control circuit

Functions of control terminals

| Category      | Terminal<br>symbol | Terminal name                    | Terminal function  |  |
|---------------|--------------------|----------------------------------|--|--|
|               | 24V                | 24V power supply                 | It provides the power of   |  |
| Power supply  | of lt f sul or     |                                  | 24V ± 10% and maximum current of 200mA.  It functions as the working power supply of digital input and output or externally connects to the sensor power supply. |  |
| Digital input | D1                 | Forced switch to power frequency | Terminal feature parameters: 1. Internal impedance: $3.3k\Omega$   |  |
|               | D2                 | Full-water alarm                 | 2. Acceptable voltage input:     12~24V     3. Maximum input frequency:  |  |
|               | D3                 | Empty-water<br>alarm             | 1kHz S1: Forcible switch to power  |  |
|               | D4                 | Single/two phase<br>algorithm    | frequency (Switching-on indicates<br>switching to power frequency, and<br>switching-off indicates input  |  |

| Category      | Terminal<br>symbol                                       | Terminal name   | Terminal function  |
|---------------|--|---|--|
|               |  | switching   | controlled by the keypad.) S2: It connects to the high-water switch of the normally open contact by default. S3: It connects to the low-water switch of the normally closed contact. S4: A high electrical level corresponds to the single-phase algorithm. A low electrical level corresponds to the two-phase algorithm. |
| Communication | RS485+<br>RS485-<br>422TX+<br>422TX-<br>422RX+<br>422RX- | 485 communication  422 communication  | 485 communication terminals, using the ModBus protocol  Communication terminals special for the boost module.  |
| Relay output  | RO1A<br>(ROA)<br>RO1B<br>(ROB)<br>RO1C<br>(ROC)          | Normally open<br>contact of relay 1<br>Normally closed<br>contact of relay 1<br>Common terminal<br>of relay 1 | Contact capacity: 3A/AC250V,     1A/DC30V     They cannot be used for high frequency switch output.     During the application of auto power frequency & PV switching, the AC input contactor coil is controlled by the normally closed contact of the relay.  |

# 4 Keypad operation procedure

# 4.1 Keypad introduction

Keypads are used to control PV100 series inverters, read the state data and adjust parameters. If external keypads are needed, select keypad extension wires.



Figure 4-1 Keypad diagram for inverters

| 5 | Serial<br>No. | Name         | D        | escription   |
|---|---------------|--------------|----------|--|
|   | 1             | State<br>LED | RUN/TUNE | LED off means that the inverter is in the stopping state; LED blinking means the |
|   |               |              |          | inverter is in the parameter autotune state;                                     |

| Serial<br>No. | Name    | Description |             |             |       |  |  |              |                  |               |                       |
|---------------|---------|-------------|-------------|-------------|-------|--|--|--------------|------------------|---------------|-----------------------|
|               |         |             |             |             |       | LE   | D on mea                               | ns th        | e invert         | ter is in the | running               |
|               |         |             |             |             |       | sta  | ate.                                   |              |                  |               |                       |
|               |         |             |             |             |       | FE   | D/REV LE                               | ΞD           |                  |               |                       |
|               |         |             |             | -> /        |       | LE   | D off mea                              | ns th        | e invert         | er is in the  | forward               |
|               |         |             | FWD/RE      | =V          |       | rot  | tation state                           | e; LE        | D on me          | eans the ir   | nverter is            |
|               |         |             |             |             |       | in   | the revers                             | e rot        | ation st         | ate.          |                       |
|               |         |             |             |             |       |  |  | keypa<br>and | ad ope<br>remote |               | erminals<br>unication |
|               |         |             |             |             |       | LE   | D off me                               | ans 1        | that the         | inverter      | is in the             |
|               |         | L           | OCAL/RE     | МОТ         |       | ke   | ypad op                                | eratio       | on stat          | te; LED       | blinking              |
|               |         |             |             |             |       | me   | eans the                               | inve         | rter is          | in the t      | erminals              |
|               |         |             |             |             |       | ор   | eration sta                            | ate; L       | .ED on           | means the     | inverter              |
|               |         |             |             |             |       |  | is in the remote communication control |              |                  |               |                       |
|               |         |             |             |             |       | state.                                       |  |              |                  |               |                       |
|               |         |             |             |             |       | LED for faults                               |  |              |                  |               |                       |
|               |         |             |             |             |       | LED on when the inverter is in the fault     |  |              |                  |               |                       |
|               |         |             | TRIP        |             |       | state; LED off in normal state; LED blinking |  |              |                  |               |                       |
|               |         |             |             |             |       | means the inverter is in the pre-alarm       |  |              |                  |               |                       |
|               |         |             |             |             |       | sta  | ate.                                   |              |                  |               |                       |
|               |         | Mean the ι  | unit displa | yed curre   | ntly  |  |  |              | 1                |               |                       |
|               |         |             |             |             |       |  | Hz                                     |              | F                | requency      | unit                  |
| 2             | Unit    |             |             |             |       |  | RPM                                    |              | Rota             | ating spee    | d unit                |
|               | LED     |             | 1           |             |       |  | Α                                      |              | Current unit     |               |                       |
|               |         |             |             |             |       |  | %                                      |              |                  | Percentag     | je                    |
|               |         |             |             |             |       |  | V                                      |              |                  | Voltage ur    | nit                   |
|               |         | 5-figure LE | D display   | displays    | vario | us   | monitoring                             | g dat        | a and a          | larm code     | such as               |
|               |         | set frequer | ncy and o   | utput frequ | uency | y.   |  |              |                  |               |                       |
| 3             | Display | Display     | Mean        | Display     | Mea   | an   | Display                                | N            | lean             | Display       | Mean                  |
| 3             | zone    | 0           | 0           | 1           | 1     |  | 2                                      |              | 2                | 3             | 3                     |
|               |         | Ч           | 4           | 5           | 5     |  | 6                                      |              | 6                | ٦-            | 7                     |
|               |         | 8           | 8           | 9           | 9     |  | 8                                      |              | Α                | О             | В                     |

| Serial<br>No. | Name           |                         | Description |     |                    |      |   |  |            |          |  |
|---------------|----------------|-------------------------|-------------|-----|--------------------|------|---|--|------------|----------|--|
|               |                | [                       | C           | ;   | ٩                  | D    | 8   | Е  | ۶          | F        |  |
|               |                | Н                       | _           | ł   | - 1                | ı    | L   | L  | Π          | N        |  |
|               |                | С                       | ٢           | 1   | 0                  | 0    | Ρ   | Р  | ١          | r        |  |
|               |                | 5                       | S           | 3   | E                  | t    | U   | U  | U          | V        |  |
|               |                |                         |             |     | -                  | -    |   |  |            |          |  |
|               |                | PRG<br>ESC              | ]           | Pro | gramming           | key  | Enter or escand remove  |  |            |          |  |
|               |                | DATA<br>ENT             | ]           |     | Entry key          |      | Enter the me<br>Confirm para  |  | step.      |          |  |
|               |                |                         | ]           |     | UP key             |      | Increase data or function code progressively.                           |  |            |          |  |
|               |                | <b>—</b>                | DOWN key    |     |                    |      |   | Decrease data or function code progressively   |            |          |  |
| 4             | Buttons        | <b>&gt;&gt;</b>         | ]           | Ri  | ght-shift k        | ey   | Move right<br>parameter<br>running mod<br>Select the pa<br>the paramete | e.<br>arameter mo  | n stoppi   |          |  |
|               |                | RUN                     |             |     | Run key            |      | This key is u   | •  | ate on the | inverter |  |
|               |                |                         | STOP<br>RST | ]   | Stop/<br>Reset key |      |   | This key is used to stop in running state and it is limited by function code P07.04. This key is used to reset all control modes in the fault alarm state. |            |          |  |
|               |                | QUICK<br>JOG            | ]           |     | Quick key          |      | The function function code  |  | y is confi | rmed by  |  |
| 5             | Keypad<br>port | External k<br>keypad LE |             |     |                    | keyp | ads are valid   | d, both the  | local and  | external |  |

# 4.2 Keypad displaying

The keypad displaying state of PV100 series inverters is divided into stopping state parameter, running state parameter, function code parameter editing state and fault alarm state and so on.

#### 4.2.1 Displayed state of stopping parameter s

When the inverter is in the stopping state, the keypad will display stopping parameters as shown in figure 4 -1.

In the stopping state, various kinds of parameters can be displayed. Select the parameters to be displayed or not by F07.07. See the instructions of F07.07 for the detailed definition of each bit.

In the stopping state, there are 4 parameters that can be displayed. They are: set frequency, bus voltage, input terminals state, and output terminals state.

>/SHIFT can shift the parameters from left to right. QUICK/JOG(F07.02=2) can shift the parameters from right to left.

#### 4.2.2 Displayed state of running parameters

After the inverter receives valid running commands, the inverter will enter into the running state and the keypad will display the running parameters. RUN/TUNE LED on the keypad is on, while the FWD/REV is determined by the current running direction which is as shown in figure 4-2.

In the running state, there are 6 parameters that can be displayed. They are: running frequency, set frequency, bus voltage, output voltage, output current, and rotating speed. 
SHIFT can shift the parameters from left to right. QUICK/JOG(F07.02=2) can shift the parameters from right to left.

## 4.2.3 Displayed state of fault s

If the inverter detects the fault signal, it will enter into the fault pre-alarm displaying state. The keypad will display the fault code by flicking. The TRIP LED on the keypad is on, and the fault reset can be operated by the STOP/RST on the keypad, control terminals or communication commands

#### 4.2.4 Displayed state of function codes editing

In the state of stopping, running or fault, press PRG/ESC to enter into the editing state (if there is a password, see P07.00). The editing state is displayed on two classes of menu, and the order is: function code group/function code number → function code parameter, press DATA/ENT into the displayed state of function parameter. On this state, press DATA/ENT to save the parameters or press PRG/ESC to escape.







Figure 4-2 Displayed state

## 4.3 Keypad operation

Operate the inverter via operation panel. See the detailed structure description of function codes in the brief diagram of function codes.

4.3.1 How to modify the function codes of the inverter

The inverter has three levels menu, which are:

- 1. Group number of function code (first-level menu)
- 2. Tab of function code (second-level menu)
- 3. Set value of function code (third-level menu)

Remarks: Press both the <a href="PRG/ESC">PRG/ESC</a> and the <a href="DATA/ENT">DATA/ENT</a> can return to the second-level menu from the third-level menu. The difference is: pressing <a href="DATA/ENT">DATA/ENT</a> will save the set parameters into the control panel, and then return to the second-level menu with shifting to the next function code automatically; while pressing <a href="PRG/ESC">PRG/ESC</a> will directly return to the second-level menu without saving the parameters, and keep staying at the current function code.

Under the third-level menu, if the parameter has no flickering bit, it means the function code cannot be modified. The possible reasons could be:

- 1) This function code is not modifiable parameter, such as actual detected parameter, operation records and so on;
- $2) \ This \ function \ code \ is \ not \ modifiable \ in \ running \ state, \ but \ modifiable \ in \ stop \ state.$

Example: Set function code F00.01 from 0 to 1.



Figure 4-3 Sketch map of modifying parameters

#### 4.3.2 How to set the password of the inverter

PV100series inverters provide password protection function to users. Set F07.00 to gain the password and the password protection becomes valid instantly after quitting from the function code editing state. Press PRG/ESCI again to the function code editing state,

"0.0.0.0.0" will be displayed. Unless using the correct password, the operators cannot enter it. Set F07. 00to 0 to cancel password protection function.

The password protection becomes effective instantly after retreating from the function code editing state. Press <a href="PRG/ESC">PRG/ESC</a> again to the function code editing state, "0.0.0.0.0" will be displayed. Unless using the correct password, the operators cannot enter it.

```
All digits are blinking

FOOD 
The unit is blinking

The unit is blinking

The unit is blinking

The unit is blinking

The unit is blinking
```

Note:When setting, → and ▲+ ▼ can be used for shifting and adjustment.

Figure 4-4 Sketch map of password setting

#### 4.3.3 How to watch the inverter state through function codes

Pv100 series inverters provide group P17 as the state inspection group. Users can enter into P17 directly to watch the state.

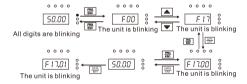


Figure 4-5 Sketch map of state watching

# 5 Commissioning guide lines

| ☐ Disconnect all power supplies applied to the inverter before the terminal       |
|---|
| wiring and wait for at least the designated time after disconnecting the          |
| power supply.   |
| ☐ High voltage is present inside the inverter during running. Do not carry out    |
| any operation except for the keypad setting.                                      |
| $\square$ The inverter automatically runs once power on. If parameters need to be |
| set, follow the guidelines in this chapter.                                       |

#### 5.1 Inspection before operation

Before powering on the inverter, ensure that:

- a) The inverter is grounded reliably.
- b) The wiring is correct and reliable.
- c) The AC/DC breaker is selected correctly.
- d) The PV input voltage is in the allowed range of the inverter.
- e) The type, voltage, and power of the motor match those of the inverter.

#### 5.2 Trial r un

Close the DC breaker. The inverter automatically runs with a delay of 10 seconds. Check the water yield of the pump. If the water yield is normal, the trial run is successful. If the water yield is under the normal value, exchange any two motor cables, connect the cables, and perform trial run again.

## 5.3 Parameter settings

The inverter automatically runs by default once being powered on. If you want to set parameters, press QUICK/JOG within 10 seconds since the inverter power-on to switch to the keypad control mode (LOCAL/REMOT) is off) and then set parameters. If the running indicator is already on after the inverter is powered on, press TOP/RST to enter the parameter setting mode. After parameter setting, turn off and then turn on the power switch. The inverter runs again.

## 5.4 Advanced settings

Note: The default settings of the inverter for the water pump can apply to most conditions and the advanced settings are not required in most cases.

## 5.4. PI adjustment to the water yield

If the user requires large or low water yield, it is necessary to adjust PI (F15.06~F15.10)

properly. The bigger PI parameters, the stronger the effect is, but the frequency fluctuation of the motor is bigger. In reserve, the lower the water yield is, the more stable the motor frequency is.

- 5.4.2 Special settings for single phase motors
- a) When the single phase motor is in bad running performance, the user can adjust P04 VF curve settings: set F04.00=1 and set F04.03~F04.08 to appropriate values according to commissioning conditions; increase the voltage if the motor cannot start and decrease the voltage if the current is high.
- b) When the light is normal and the system starts slowly, increase F15.28 initial voltage differential value appropriately.
- c) For single phase motors with two-phase control (capacitor-removing):
- ① The maximum voltage needs to be less than 1/1.6 of the bus voltage. It is recommended to set the rated voltage F02.04 less than 200V, or limit the maximum voltage output by multi-dot V/F curve.
- ② Observe the currents of the windings through F17.38 and F17.39, the switched current is the combination current of the two windings. The impedances of the windings are different, so the currents are different at the same voltage output.
- ③ F04.35 can be used to change the output currents of the main and secondary windings. It is recommended that qualified engineers perform adjustment since the voltage adjustment is associated with motor design parameters. Otherwise, the motor performance may be impacted.

# 6 Function parameters

- " $\bigcirc$ " : means theset value of the parameter can be modified on stop and running state;
- "©": means the set value of the parameter cannotbe modified on the running state;
- "• " : means the value of the parameter is the real detection value which cannot be modified;

Note: The inverter implements auto checking and restriction on the parameter modification property. This prevents users from modifying parameters by misoperation.

# 6.1 Common function parameters for solar pumping inverter control

| Function code                  | Name                   | Detailed illustration of parameters   | Default | Modify |  |  |
|--------------------------------|------------------------|---|---------|--------|--|--|
| F00 Group Basic function group |                        |   |         |        |  |  |
| F00.00                         | Speed control<br>mode  | 0: SVC 0 applications which need small power. 1: SVC 1 2: SVPWM control Note: In vector control, the inverter must autotune motor parameters first. | 2       | 0      |  |  |
| F00.01                         | Run command<br>channel | Select the run command channel of the inverter. The control command of the inverter includes: start, stop, forward/reverse                          | 1       | 0      |  |  |

| Function code | Name                                 | Detailed illustration of parameters         | Default | Modify |
|---------------|--------------------------------------|---|---------|--------|
|               |                                      | rotating, jogging and fault reset.          |         |        |
|               |                                      | 0: Keypad running command                   |         |        |
|               |                                      | channel( "LOCAL/REMOT" light off)           |         |        |
|               |                                      | Carry out the command control by RUN,       |         |        |
|               |                                      | STOP/RST on the keypad.                     |         |        |
|               |                                      | Set the multi-function key QUICK/JOG to     |         |        |
|               |                                      | FWD/REV shifting function (P07.02=3) to     |         |        |
|               |                                      | change the running direction; press RUN     |         |        |
|               |                                      | and STOP/RST simultaneously in running      |         |        |
|               |                                      | state to make the inverter coast to stop.   |         |        |
|               |                                      | 1: Terminal running command channel         |         |        |
|               |                                      | ( "LOCAL/REMOT " flickering)                |         |        |
|               |                                      | Carry out the running command control by    |         |        |
|               |                                      | the forward rotation, reverse rotation and  |         |        |
|               |                                      | forward jogging and reverse jogging of the  |         |        |
|               |                                      | multi-function terminals.                   |         |        |
|               |                                      | 2: Communication running command            |         |        |
|               |                                      | channel(" LOCAL/REMOT" on);                 |         |        |
|               |                                      | The running command is controlled by the    |         |        |
|               |                                      | upper monitor via communication.            |         |        |
| F00.03        | Max. output<br>frequency             | Setting range: F00.04~400.00Hz              | 50.00Hz | 0      |
| F00.04        | Upper limit of the running frequency | The upper limit of the running frequency is | 50.00Hz | 0      |

| Function code | Name                                 | Detailed illustration of parameters   | Default           | Modify |
|---------------|--------------------------------------|---|-------------------|--------|
|               |                                      | Setting range: F00.05~F00.03 (Max. output frequency)  |                   |        |
| F00.05        | Lower limit of the running frequency | Note: Max.output frequency ≥ Upper limit frequency > Lower limit frequency Setting range: 0.00Hz~F00.04 (Upper limit of the running frequency)  | 0.00Hz            | 0      |
| F00.11        | ACC time 1                           | ACC time means the time needed if the inverter speeds up from 0Hz to the Max. output frequency (F00.03).  DEC time means the time needed if the inverter speeds down from the Max.  Output frequency to 0Hz (F00.03).  PV100 series inverters have four groups of ACC/DEC time which can be selected by F05. The factory default  ACC/DEC time of the inverter is the first | Depend<br>on mode | 0      |
| F00.12        | DEC time 1                           |   | Depend<br>on mode | 0      |
| F00.13        | Running direction selection          | 0: Runs at the default direction. The   | 0                 | 0      |

| Function code | Name            | Detailed illustration of parameters           | Default | Modify |
|---------------|-----------------|---|---------|--------|
|               |                 | inverter runs in the forward direction.       |         |        |
|               |                 | FWD/REV indicator is off.                     |         |        |
|               |                 | 1: Runs at the opposite direction. The        |         |        |
|               |                 | inverter runs in the reverse direction.       |         |        |
|               |                 | FWD/REV indicator is on.                      |         |        |
|               |                 | Modify the function code to shift the         |         |        |
|               |                 | rotation direction of the motor. This effect  |         |        |
|               |                 | equals to the shifting the rotation direction |         |        |
|               |                 | by adjusting either two of the motor lines    |         |        |
|               |                 | (U, V and W). The motor rotation direction    |         |        |
|               |                 | can be changed by QUICK/JOG on the            |         |        |
|               |                 | keypad. Refer to parameter F07.02.            |         |        |
|               |                 | Note:   |         |        |
|               |                 | When the function parameter comes back        |         |        |
|               |                 | to the default value, the motor's running     |         |        |
|               |                 | direction will come back to the factory       |         |        |
|               |                 | default state, too.                           |         |        |
|               |                 | In pump application scenarios, the            |         |        |
|               |                 | inverter cannot run in the reverse            |         |        |
|               |                 | direction. This function code cannot be       |         |        |
|               |                 | modified.                                     |         |        |
|               |                 | 2: Forbid to run in reverse direction: It can |         |        |
|               |                 | be used in some special cases if the          |         |        |
|               |                 | reverse running is disabled.                  |         |        |
|               |                 | 0: No operation                               |         |        |
| F00.15        | Motor parameter | 1: Rotation autotuning                        |         | 0      |
| 100.13        | autotuning      | Comprehensive motor parameter                 | 0       | 9      |
|               |                 | autotune.                                     |         |        |

| Function code | Name                | Detailed illustration of parameters        | Default | Modify |
|---------------|---------------------|--|---------|--------|
|               |                     | It is recommended to use rotation          |         |        |
|               |                     | autotuning when high control accuracy is   |         |        |
|               |                     | needed.                                    |         |        |
|               |                     | 2: Static autotuning                       |         |        |
|               |                     | It is suitable in the cases when the motor |         |        |
|               |                     | cannot de-couple form the load. The        |         |        |
|               |                     | antotuning for the motor parameter will    |         |        |
|               |                     | impact the control accuracy.               |         |        |
|               |                     | 3: Static autotuning 2 (No autotuning for  |         |        |
|               |                     | non-load current and mutual inductance)    |         |        |
|               |                     | 0: No operation                            |         |        |
|               |                     | 1: Restore the default value               |         |        |
|               |                     | 2: Clear fault records                     |         |        |
|               |                     | Note:                                      |         |        |
| F00.18        | Function            | The function code will restore to 0 after  | 0       | 0      |
| F00.16        | restore parameter   | finishing the operation of the selected    | U       | 9      |
|               |                     | function code.                             |         |        |
|               |                     | Restoring to the default value will cancel |         |        |
|               |                     | the user password. Use this function with  |         |        |
|               |                     | caution.                                   |         |        |
| F01 Group     | Start-up and stop c | ontrol                                     | •       |        |
|               |                     | 0: Decelerate to stop. After the stop      |         |        |
|               |                     | command becomes valid, the inverter        |         |        |
|               |                     | decelerates to reduce the output           |         |        |
| F01.08        | Stop mode           | frequency during the set time. When the    | 0       | 0      |
|               |                     | frequency decreases to 0Hz, the inverter   |         |        |
|               |                     | stops.                                     |         |        |
|               |                     | 1: Coast to stop. After the stop command   |         |        |

| Function code | Name  | Detailed illustr  | ation of parameters  | Default            | Modify |
|---------------|---|---|--|--------------------|--------|
|               |   | becomes valid, the inverter ceases the output immediately. And the load coasts to stop at the mechanical inertia. |  |                    |        |
| F01.18        | Operation protection                                | invalid when pow  | erminal running command is vhen powering on. erminal running command is valid bywering on. |                    | 0      |
| F01.21        | Restart after power off                             | 0: Disabled<br>1: Enabled   |  | 1                  | 0      |
| F02 Group     | Motor 1 parameters                                  | 3   |  |                    |        |
| F02.00        | Motor type  | 0: Asynchronous motor<br>1: Reserved  |  | 0                  | 0      |
| F02.01        | Rated power of<br>asynchronous<br>motor             | 0.1~3000.0kW  | Set the parameter of the asynchronous motor.   | Depend<br>on model | 0      |
| F02.02        | Rated frequency<br>of asynchronous<br>motor         | 0.01Hz~P00.03   | In order to ensure the controlling performance, set the F02.01~F02.05                      | 50.00<br>Hz        | 0      |
| F02.03        | Rated rotating<br>speed of<br>asynchronous<br>motor | 1~36000rpm  | according to the name plate of the asynchronous motor.                                     | Depend<br>on model | 0      |
| F02.04        | Rated voltage of asynchronous motor                 | 0~1200V   | PV100 series<br>inverters provide the<br>function of parameter<br>autotuning. Correct      | Depend<br>on model | 0      |

| Function code | Name                                      | Detailed illustr | ation of parameters   | Default            | Modify   |
|---------------|---|------------------|---|--------------------|----------|
| F02.05        | Rated current of<br>asynchronous<br>motor | 0.8~6000.0A      | parameter autotuning comes from the correct setting of the motor name plate. In order to ensure the controlling performance, please configure the motor according to the standard principles, if the gap between the motor and the standard one is huge, the features of the inverter will decrease. Note: Resetting the rated power (F02.01) of the motor can initialize the motor parameters F02.02–F02.10. | Depend<br>on model | <b>©</b> |
| F02.06        | Stator resistor of asynchronous motor     | 0.001~65.535Ω    | After the motor parameter autotuning  | Depend<br>on model | 0        |
| F02.07        | Rotor resistor of asynchronous motor      | 0.001~65.535Ω    | be updated automatically. These parameters are basic  | Depend<br>on model | 0        |
| F02.08        | Leakage<br>inductance of<br>asynchronous  | 0.1~6553.5mH     |   | Depend<br>on model | 0        |

| Function code | Name                                    | Detailed illustration of parameters  |  | Default            | Modify |
|---------------|---|--|--|--------------------|--------|
|               | motor                                   |  | by vectors which                         |                    |        |
| F02.09        | Mutual inductance of asynchronous motor | 0.1~6553.5mH   | Note: Users cannot modify the parameters | Depend<br>on model | 0      |
| F02.10        | Non-load current of asynchronous motor  | 0.1~6553.5A  |  | Depend<br>on model | 0      |
| F04 Group     | SVPWM control                           |  |  |                    |        |
| F04.00        | V/F curve setting                       | of PV100 series need of different 0: Straight line V/constant torque I 1: Multi-dots V/F 2: Torque-stepdo (1.3 order) 3: Torque-stepdo (1.7 order) 4: Torque-stepdo (2.0 order) Curves 2-4 apply as fans and wate adjust according loads to get the best of the constant of th | /F curve; applying to the oad            | 4                  | •      |

| Function code | Name   | Detailed illustration of parameters  | Default | Modify |
|---------------|--|--|---------|--------|
|               | change the feature of the curve.  Note: $V_b$ in the below picture is the rated voltage and $f_b$ is the motor rate frequency. |  |         |        |
|               |  | Linear type  Linea |         |        |
| F04.01        | Torque boost   | Torque boost to the output voltage for the   | 0.0%    | 0      |
| F04.02        | Torque boost close   | features of low frequency torque. F04.01 is for the Max. output voltage Vb. F04.02 defines the percentage of closing frequency of manual torque to fb. Torque boost should be selected according to the load. The bigger the load is, the bigger the torque is. Too big torque boost is inappropriate because the motor will run with over magnetic, and the current of the inverter will increase to add the temperature of the inverter and decrease the efficiency. When the torque boost is set to 0.0%, the inverter is automatic torque boost. Torque boost threshold: below this frequency point, the torque boost is valid, but over this frequency point, the torque boost is invalid.  | 20.0%   | 0      |

| Function code | Name                                   | Detailed illustration of parameters   | Default     | Modify |
|---------------|--|---|-------------|--------|
|               |  | Setting range of F04.01: 0.0%: (automatic) 0.1%~10.0% Setting range of F04.02: 0.0%~50.0%   |             |        |
| F04.03        | V/F<br>frequency point 1<br>of motor 1 | If F04.00 =1, the user can set V//F curve by F04.03~F04.08.  V/F is set to the motor load.  | 0.00Hz      | 0      |
| F04.04        | V/F<br>voltage point 1 of<br>motor 1   | Note: V1 <v2<v3; and="" burning="" f1<f2<f3.="" high,="" if="" is="" low-frequency="" may="" occur="" overcurrent="" overtemperature="" protection<="" stall="" td="" the="" voltage=""><td>00.0%</td><td>0</td></v2<v3;> | 00.0%       | 0      |
| F04.05        | V/F<br>frequency point 2<br>of motor 1 | may occur to the inverter.  Output voltage  100.0%/b  | 00.00<br>Hz | 0      |
| F04.06        | V/F<br>voltage point 2 of<br>motor 1   | V2<br>V1<br>V1 Output frequency<br>f1 f2 f3 fb<br>Setting range of F04.03: 0.00Hz~F04.05  | 00.0%       | 0      |
| F04.07        | V/F<br>frequency point 3<br>of motor 1 | Setting range of F04.04: 0.0%~110.0% (rated voltage of motor1) Setting range of F04.05: F04.03~F04.07 Setting range of F04.06:  | 00.00<br>Hz | 0      |
| F04.08        | V/F<br>voltage point 3 of<br>motor 1   | 0.0%~110.0%(rated voltage of motor1) Setting range of F04.07:   | 00.0%       | 0      |

| Function code | Name                          | Detailed illustration of parameters                 | Default | Modify |
|---------------|-------------------------------|---|---------|--------|
|               |                               | F04.05~F02.02 (rated frequency of                   |         |        |
|               |                               | motor1) or F04.05~F02.16 (rated                     |         |        |
|               |                               | frequency of motor1)                                |         |        |
|               |                               | Setting range of F04.08: 0.0%~110.0%                |         |        |
|               |                               | (rated voltage of motor1)                           |         |        |
|               |                               | This function code is used to compensate            |         |        |
|               |                               | the change of the rotation speed caused             |         |        |
|               |                               | by load during compensation SVPWM                   |         |        |
|               |                               | control to improve the rigidity of the motor.       |         |        |
|               |                               | It can be set to the rated slip frequency of        |         |        |
|               |                               | the motor which is counted as below:                |         |        |
| E04.00        | V/F slip<br>compensation gain | $\triangle$ f=f <sub>b</sub> -n*p/60                | 0.0%    | 0      |
| F04.09        |                               | Of which, fb is the rated frequency of the          |         |        |
|               |                               | motor, its function code is F02.01; n is the        |         |        |
|               |                               | rated rotating speed of the motor and its           |         |        |
|               |                               | function code is <b>F</b> 02.02; p is the pole pair |         |        |
|               |                               | of the motor. 100.0% corresponds to the             |         |        |
|               |                               | rated slip frequency∆f.                             |         |        |
|               |                               | Setting range: 0.0~200.0%                           |         |        |
|               | Single-phase drive<br>mode    | Ones: Single-phase motor control mode               |         |        |
|               |                               | 0: Disabled; 1: Enabled (The function is            | 0x00    |        |
| F04.34        |                               | reserved. The control mode of the                   |         |        |
|               |                               | single-phase motor is specified by the              |         |        |
|               |                               | external terminal command.)                         |         | 0      |
|               |                               | Tens: Voltage of the secondary winding (V           |         |        |
|               |                               | phase) reverse                                      |         |        |
|               |                               | 0: Not reversed; 1: Reversed                        |         |        |
|               |                               | Setting range: 0~0x11                               |         |        |

| Function code             | Name                                | Detailed illustration of parameters  | Default | Modify |
|---------------------------|-------------------------------------|--|---------|--------|
| F04.35                    | Voltage ratio of V<br>and U         | 0.00~2.00  | 1.40    | 0      |
| F05 Group Input terminals |                                     |  |         |        |
| F05.00                    | HDI input type                      | 0: High-speed pulse input. See<br>F05.49~F05.54 .<br>1: HDI switch input   | 1       | 0      |
| F05.01                    | D1 terminals function selection     | No function     Forward rotation operation   | 42      | 0      |
| F05.02                    | D2 terminals function selection     | 2: Reverse rotation operation 3: 3-wire control operation  | 43      | 0      |
| F05.03                    | D3 terminals function selection     | <ul><li>4: Forward jogging</li><li>5: Reverse jogging</li><li>6: Coast to stop</li></ul>   | 44      | 0      |
| F05.04                    | D4 terminals function selection     | 7: Fault reset<br>8: Operation pause   | 45      | 0      |
| F05.05                    | D5 terminals function selection     | <ul><li>9: External fault input</li><li>10: Increasing frequency setting(UP)</li><li>11: Decreasing frequency setting(DOWN)</li></ul>  | 1       |        |
| F05.09                    | HDI terminals<br>function selection | 12: Cancel the frequency change setting 13: Shift between A setting and B setting 14: Shift between combination setting and A setting 15: Shift between combination setting and B setting 16: Multi-step speed terminal 1 17: Multi-step speed terminal 2 18: Multi-step speed terminal 3 19: Multi-step speed terminal 4 20: Multi-step speed pause | 46      | ©      |

| Function code | Name | Detailed illustration of parameters        | Default | Modify |
|---------------|------|--|---------|--------|
|               |      | 21: ACC/DEC time1                          |         |        |
|               |      | 22: ACC/DEC time 2                         |         |        |
|               |      | 23: Simple PLC stop reset                  |         |        |
|               |      | 24: Simple PLC pause                       |         |        |
|               |      | 25: PID control pause                      |         |        |
|               |      | 26: Traverse pause (stop at the current    |         |        |
|               |      | frequency)                                 |         |        |
|               |      | 27: Traverse reset (return to the center   |         |        |
|               |      | frequency)                                 |         |        |
|               |      | 28: Counter reset                          |         |        |
|               |      | 29: Torque control prohibition             |         |        |
|               |      | 30: ACC/DEC prohibition                    |         |        |
|               |      | 31: Counter trigger                        |         |        |
|               |      | 32: Reserved                               |         |        |
|               |      | 33: Cancel the frequency change setting    |         |        |
|               |      | 34: DC brake                               |         |        |
|               |      | 35: Reserved                               |         |        |
|               |      | 36: Shift the command to the keypad        |         |        |
|               |      | 37: Shift the command to terminals         |         |        |
|               |      | 38: Shift the command to communication     |         |        |
|               |      | 39: Pre-magnetized command                 |         |        |
|               |      | 40: Clear the power                        |         |        |
|               |      | 41: Keep the power                         |         |        |
|               |      | 42: Forced switch to power frequency       |         |        |
|               |      | input (Switching-on indicates switching to |         |        |
|               |      | power frequency input; switching-off       |         |        |
|               |      | indicates the input mode is controlled by  |         |        |
|               |      | the keypad.)                               |         |        |

| Function code | Name               | Detail                        | led illust  | ration of   | paramet   | ers      | Default | Modify |
|---------------|--------------------|-------------------------------|-------------|-------------|-----------|----------|---------|--------|
|               |                    |                               | water siç   | •           |           |          |         |        |
|               |                    |                               | -water si   | -           |           |          |         |        |
|               |                    | 45: Two                       | -phase c    | control m   | ode of th | е        |         |        |
|               |                    | single-p                      | hase mo     | otor        |           |          |         |        |
|               |                    | 46: PV \                      | voltage d   | ligital inp | ut when   | no boost |         |        |
|               |                    | module                        | is applie   | d (in aut   | switchi   | ng       |         |        |
|               |                    | mode)                         |             |             |           |          |         |        |
|               |                    | 47~63: 1                      | Reserve     | d           |           |          |         |        |
|               | Polarity selection | 0x000~0                       | 0x10F       |             |           |          |         |        |
| F05.10        | of the input       | BIT8                          | BIT3        | BIT2        | BIT1      | BIT0     | 0x000   | 0      |
|               | terminals          | HDI                           | S4          | S3          | S2        | S1       |         |        |
| F06 Group     | Output terminals   |                               |             |             |           |          |         |        |
|               |                    | 0: Invali                     | d           |             |           |          |         |        |
| F06.03        | Relay RO1 output   | 1: In operation               |             |             | 30        | 0        |         |        |
|               | selection          | 2: Forwa                      | ard rotati  | ion opera   | ation     |          |         |        |
|               |                    | 3: Reve                       | rse rotati  | ion opera   | ation     |          |         |        |
|               |                    | 4: Jogging operation          |             |             |           |          |         |        |
|               |                    | 5: Invert                     | ter fault   |             |           |          |         |        |
|               |                    | 6: Frequency degree test FDT1 |             |             |           |          |         |        |
|               |                    | 7: Frequency degree test FDT2 |             |             |           |          |         |        |
|               |                    | 8: Frequency arrival          |             |             |           |          |         |        |
| F06.04        | Relay RO2 output   | 9: Zero                       | speed ru    | ınning      |           |          | 5       | 0      |
|               | selection          | 10: Upp                       | er limit fr | requency    | arrival   |          |         |        |
|               |                    | 11: Low                       | er limit fr | equency     | arrival   |          |         |        |
|               |                    | 12: Rea                       | dy for op   | eration     |           |          |         |        |
|               |                    | 13: Pre-                      | magneti     | zing        |           |          |         |        |
|               |                    | 14: Ove                       | rload ala   | ırm         |           |          |         |        |
|               |                    | 15: Und                       | erload a    | larm        |           |          |         |        |

| Function code | Name                      | Detailed illustration of parameters       | Default | Modify |
|---------------|---------------------------|---|---------|--------|
|               |                           | 16: Completion of simple PLC stage        |         |        |
|               |                           | 17: Completion of simple PLC cycle        |         |        |
|               |                           | 18: Setting count value arrival           |         |        |
|               |                           | 19: Defined count value arrival           |         |        |
|               |                           | 20: External fault valid                  |         |        |
|               |                           | 21: Reserved                              |         |        |
|               |                           | 22: Running time arrival                  |         |        |
|               |                           | 23: MODBUS communication virtual          |         |        |
|               |                           | terminals output                          |         |        |
|               |                           | 24~26: Reserved                           |         |        |
|               |                           | 27: Weak light                            |         |        |
|               |                           | 28~29: Reserved                           |         |        |
|               |                           | 30: Shift to PV mode (If the system works |         |        |
|               |                           | in PV mode, relay output is high.)        |         |        |
|               |                           | The function code is used to set the pole |         |        |
|               |                           | of the output terminal.                   |         |        |
|               |                           | When the current bit is set to 0, output  |         |        |
|               | Polarity selection        | terminal is positive.                     |         |        |
| F06.05        | of output                 | When the current bit is set to 1, output  | 0       | 0      |
|               | terminals                 | terminal is negative.                     |         |        |
|               |                           | BIT1 BIT0                                 |         |        |
|               |                           | RO2 RO1                                   |         |        |
|               |                           | Setting range: 0~F                        |         |        |
| F06.10        | Switch on delay of<br>RO1 | 0.000~50.000s                             | 10.000s | 0      |
| F06.11        | Switch off delay of RO1   | 0.000~50.000s                             | 10.000s | 0      |

| Function code | Name                            | Detailed illustration of parameters  | Default | Modify |
|---------------|---------------------------------|--|---------|--------|
| F06.12        | Switch on delay of RO2          | 0.000~50.000s  | 0.000s  | 0      |
| F06.13        | Switch off delay of RO2         | 0.000~50.000s  | 0.000s  | 0      |
| F07 Group     | Human -Machine Ir               | nterface   |         |        |
| F07.02        | QUICK/JOG<br>function selection | O: No function  1: Jogging running. Press QUICK/JOG to begin the jogging running.  2: Shift the display state by the shifting key. Press QUICK/JOG to shift the displayed function code from right to left.  3: Shift between forward rotations and reverse rotations. Press QUICK/JOG to shift the direction of the frequency commands. This function is only valid in the keypad commands channels.  4: Clear UP/DOWN settings. Press QUICK/JOG to clear the set value of UP/DOWN.  5: Coast to stop. Press QUICK/JOG to coast to stop.  6: Shift the running commands source. Press QUICK/JOG to shift the running commands source.  7: Quick commissioning mode (based on non-factory parameters)  Note: Press QUICK/JOG to shift between forward rotation and reverse rotation, the | 6       | •      |

| Function code | Name  | Detailed illustration of parameters  | Default | Modify |
|---------------|---|--|---------|--------|
|               |   | inverter does not record the state after shifting during powering off. The inverter will run according to parameter F00.13 during next powering on.  |         |        |
| F07.03        | QUICK/JOG the<br>shifting sequence<br>of running<br>command | When F07.02=6, set the shifting sequence of running command channels.  0: Keypad control→terminal control →communication control  1: Keypad control←→terminals control 2: Keypad control←→communication control 3: Terminals control←→communication control          | 1       | 0      |
| F07.04        | STOP/RST stop<br>function                                   | Select the stop function by STOP/RST. STOP/RST is effective in any state for the keypad reset. 0: Only valid for the keypad control 1: Both valid for keypad and terminals control 2: Both valid for keypad and communication control 3: Valid for all control modes | 1       | 0      |
| F07.11        | Boost module<br>temperature                                 | When the inverter is configured with the boost module, this function code displays the temperature of this module. This function code is valid only in the AC mode. This function code is invalid in the PV mode.  |         | •      |

| Function code | Name                              | Detailed illustration of parameters   | Default | Modify |
|---------------|-----------------------------------|---|---------|--------|
|               |                                   | -20.0~120.0?  |         |        |
| F07.12        | Converter module temperature      | -20.0~120.0?  |         | •      |
| F07.15        | MSB of inverter power consumption | Display the power used by the inverter.  Inverter power  consumption=F07.15*1000+F07.16     |         | •      |
| F07.16        | LSB of inverter power consumption | Setting range of F07.15: 0~65535 (*1000)<br>Setting range of F07.16: 0.0~999.9<br>Unit: kWh |         | •      |
| F07.27        | Current fault type                |   |         |        |
| F07.28        | Previous fault<br>type            | 0:No fault  1:IGBT U phase protection(OUt1)   |         | •      |
| F07.29        | Previous 2 fault type             | 2:IGBT V phase protection(OUt2) 3:IGBT W phase protection(OUt3)                             |         | •      |
| F07.30        | Previous 3 fault<br>type          | 4:0C1<br>5:0C2  |         | •      |
| F07.31        | Previous 4 fault type             | 6:OC3<br>7:OV1<br>8:OV2   |         | •      |
| F07.32        | Previous 5 fault type             | 9:OV3<br>10:UV  |         | •      |
| F07.57        | Previous 6 fault type             | 11:Motor overload(OL1) 12:The inverter overload(OL2)  |         | •      |
| F07.58        | Previous 7 fault type             | 13:Input side phase loss(SPI) 14:Output side phase loss(SPO)                                |         | •      |
| F07.59        | Previous 8 fault type             | 15: Overheat of the boost module (OH1)  16: Overheat fault of the inverter                  |         | •      |
| F07.60        | Previous 9 fault                  | module(OH2)   |         | •      |

| Function code | Name              | Detailed illustration of parameters        | Default | Modify |
|---------------|-------------------|--|---------|--------|
|               | type              | 17: External fault(EF)                     |         |        |
|               |                   | 18: 485 communication fault(CE)            |         |        |
| F07.61        | Previous 10 fault | 19:Current detection fault(ItE)            |         | •      |
|               | type              | 20:Motor antotune fault(tE)                |         |        |
| F07.62        | Previous 11 fault | 21: EEPROM operation fault(EEP)            |         |        |
| 107.02        | type              | 22: PID response offline fault(PIDE)       |         |        |
| F07.63        | Previous 12 fault | 23: Braking unit fault(bCE)                |         |        |
| 1 07.00       | type              | 24: Running time arrival(END)              |         |        |
| F07.64        | Previous 13 fault | 25: Electrical overload(OL3)               |         |        |
| 1 07.04       | type              | 26~31:Reserved                             |         |        |
| F07.65        | Previous 14 fault | 32: Grounding short circuit fault 1(ETH1)  |         |        |
| 107.03        | type              | 33: Grounding short circuit fault 2(ETH2)  |         |        |
| F07.66        | Previous 15 fault | 34: Speed deviation fault(dEu)             |         |        |
| F07.00        | type              | 35: Maladjustment(STo)                     |         |        |
| F07.67        | Previous 16 fault | 36:Underload fault(LL)                     |         |        |
| FU7.67        | type              | 37: Hydraulic probe damage(tSF)            |         |        |
| E07.00        | Previous 17 fault | 38: PV reverse connection fault(PINV)      |         |        |
| F07.68        | type              | 39: PV overcurrent(PVOC)                   |         |        |
| F07.00        | Previous 18 fault | 40: PV overvoltage(PVOV)                   |         |        |
| F07.69        | type              | 41:PV undervoltage(PVLV)                   |         |        |
| -o            | Previous 19 fault | 42: Fault on communication with the boost  |         |        |
| F07.70        | type              | module (E-422)                             |         |        |
|               |                   | 43: Bus overvoltage detected on the boost  |         |        |
|               |                   | module (OV)                                |         |        |
| F07.74        | Previous 20 fault | Note: Faults 38~40 can be detected in      |         |        |
| F07.71        | type              | boost. The boost module stops working      |         |        |
|               |                   | once after detecting a fault. The boost    |         |        |
|               |                   | module sends back the fault information to |         |        |

| Function code | Name              | Detailed illustration of parameters  | Default | Modify |
|---------------|-------------------|--------------------------------------|---------|--------|
|               |                   | the inverter module in the next data |         |        |
|               |                   | sendback.                            |         |        |
|               |                   | Alarms:                              |         |        |
|               |                   | Weak light alarm (A-LS)              |         |        |
|               |                   | Underload alarm (A-LL)               |         |        |
|               |                   | Full water alarm (A-tF)              |         |        |
|               |                   | Water-empty alarm (A-tL)             |         |        |
| F08 Group     | Enhanced function | S                                    |         |        |
| F08.28        | Times of fault    | 0.40                                 | 5       |        |
| FU0.20        | reset             | 0~10                                 | 5       | )      |
|               | Interval time of  |                                      |         |        |
| F08.29        | automatic fault   | 0.1~3600.0s                          | 10.0s   | 0      |
|               | reset             |                                      |         |        |

# 6.2 Parameters of special functions

| Function code                | Name  | Detailed illustration of parameters   | Default | Modify |  |  |
|------------------------------|---|---|---------|--------|--|--|
| F11 Group                    | Protective parameters                                   |   |         |        |  |  |
| F11.00 Phase loss protection | 0x000~0x011<br>LED ones:                                |   |         |        |  |  |
|                              | O: Input phase loss software protection disabled        |   |         |        |  |  |
|                              | Input phase loss software protection enabled  LED tens: | Depend<br>on model  | 0       |        |  |  |
|                              |   | O: Output phase loss software protection disabled     Output phase loss software protection |         |        |  |  |
|                              |   | enabled   |         |        |  |  |

| Function code | Name  | Detailed illustration of parameters  |          | Default  | Modify |
|---------------|---|--|----------|----------|--------|
|               |   | LED hundreds:  |          |          |        |
|               |   | 000~111  |          |          |        |
| F11.01        | Frequency<br>decrease at<br>sudden power loss       | 0: Disable<br>1: Enable  |          | 0        | 0      |
| F11.02        | Frequency<br>decrease ratio at<br>sudden power loss | Setting range: 0.00Hz~F00.03/s After the power loss of the grid, the voltage drops to the sudden frequent decrease point, the inverter begin to decrease the running frequency at F11.02, to make the inverter general power again. The returning power of maintain the bus voltage to ensure rated running of the inverter until the recovery of power.    Voltage   220V   400V   460V   4 | ate an e | 0.00Hz/s | 0      |
| F15 Group     | Special functions fo                                |  |          |          |        |
| F15.00        | PV inverter selection                               | 0: Invalid 1: Enable 0 means the function is invalid and the group of parameters cannot be used 1 means the function is enabled, and P15 parameters can be adjusted  |          | 1        | 0      |
| F15.01        | Vmpp voltage reference                              | 0: Voltage reference 1: Max. power tracking  |          | 1        | 0      |

| Function code | Name                             | Detailed illustration of parameters         | Default | Modify  |
|---------------|----------------------------------|---|---------|---------|
|               |                                  | 0 means to apply voltage reference          |         |         |
|               |                                  | mode. The reference is a fixed value and    |         |         |
|               |                                  | given by F15.02.                            |         |         |
|               |                                  | 1 means to apply the reference voltage      |         |         |
|               |                                  | of Max. power tracking. The voltage is      |         |         |
|               |                                  | changing until the system is stable.        |         |         |
|               |                                  | Note: If terminal 43 is valid, the function |         |         |
|               |                                  | is invalid.                                 |         |         |
|               |                                  | 0.0~6553.5Vdc                               |         |         |
|               |                                  | If F15.01 is 0, the reference voltage is    |         |         |
| F15.02        | Vmpp voltage<br>keypad reference | given by F15.02. (During test, reference    | 250.0V  | $\circ$ |
| 1 10.02       |                                  | voltage should be lower than PV input       | 250.00  |         |
|               |                                  | voltage; otherwise, the system will run at  |         |         |
|               |                                  | lower limit of frequency).                  |         |         |
|               |                                  | 0.0~100.0% (100.0% corresponds to           |         |         |
|               |                                  | F15.02)                                     |         |         |
|               |                                  | If the ratio percentage of real voltage to  |         |         |
|               |                                  | reference voltage, which is abs(bus         |         |         |
|               |                                  | voltage-reference voltage)*100.0%/          |         | _       |
| F15.03        | PI control deviation             | reference voltage, exceeds the deviation    | 0.0%    | 0       |
|               |                                  | limit of F15.03, PI adjustment is           |         |         |
|               |                                  | available; otherwise, there is no PI        |         |         |
|               |                                  | adjustment and the value is defaulted to    |         |         |
|               |                                  | be 0.0%.                                    |         |         |
|               |                                  | abs: absolute value                         |         |         |
|               | Upper frequency                  | F15.05~100.0% (100.0% corresponds to        |         |         |
| F15.04        |                                  | P00.03)                                     | 100.0%  | 0       |
|               | of PI output                     | F15.04 is used to limit the Max. value of   |         |         |

| Function code | Name            | Detailed illustration of parameters       | Default | Modify |
|---------------|-----------------|---|---------|--------|
|               |                 | target frequency, and 100.0%              |         |        |
|               |                 | corresponds to F00.03.                    |         |        |
|               |                 | After PI adjustment, the target frequency |         |        |
|               |                 | cannot exceed the upper limit.            |         |        |
|               |                 | 0.0%~P15.04 (100.0% corresponds to        |         |        |
|               |                 | F00.03)                                   |         |        |
|               |                 | P15.05 is used to limit the Min. value of |         |        |
| F15.05        | Lower frequency | target frequency, and 100.0%              | 20.0%   | 0      |
|               | of PI output    | corresponds to F00.03.                    |         |        |
|               |                 | After PI adjustment, the target frequency |         |        |
|               |                 | cannot be less than the lower limit.      |         |        |
|               |                 | 0.00~100.00                               |         |        |
|               | KP1             | Proportion coefficient 1 of the target    |         |        |
| F15.06        |                 | frequency                                 | 5.00    | 0      |
|               |                 | The bigger the value is, the stronger the |         |        |
|               |                 | effect and faster the adjustment is.      |         |        |
|               |                 | 0.00~100.00                               |         |        |
|               |                 | Integral coefficient 1 of the target      |         |        |
| F15.07        | KI1             | frequency                                 | 5.00    | 0      |
|               |                 | The bigger the value is, the stronger the |         |        |
|               |                 | effect and faster the adjustment is.      |         |        |
|               |                 | 0.00~100.00                               |         |        |
|               |                 | Proportion coefficient 2 of the target    |         |        |
| F15.08        | KP2             | frequency                                 | 35.00   | 0      |
|               |                 | The bigger the value is, the stronger the |         |        |
|               |                 | effect and faster the adjustment is.      |         |        |
| F15.09        | KIS             | 0.00~100.00                               | 25.00   |        |
| F15.09        | KI2             | Integral coefficient 2 of the target      | 35.00   |        |

| Function code | Name                | Detailed illustration of parameters         | Default | Modify |
|---------------|---------------------|---|---------|--------|
|               |                     | frequency                                   |         |        |
|               |                     | The bigger the value is, the stronger the   |         |        |
|               |                     | effect and faster the adjustment is.        |         |        |
|               |                     | 0.0~6553.5Vdc                               |         |        |
|               |                     | If the absolute value of bus voltage        |         |        |
| F15.10        | PI switching point  | minus the reference value is bigger than    | 20.0V   | 0      |
| F 13.10       | Fi switching point  | F15.10, it will switch to F15.08 and        | 20.00   | 0      |
|               |                     | F15.09; otherwise it is F15.06 and          |         |        |
|               |                     | F15.07.                                     |         |        |
|               |                     | 0: Digital input of the water-level control |         |        |
|               |                     | 1: Al1(the water-level signal is input      |         |        |
|               |                     | through Al1, not supported currently)       |         |        |
|               |                     | 2: Al2 (the water-level signal is input     |         |        |
|               |                     | through AI2)                                |         |        |
|               |                     | 3: Al3 (the water-level signal is input     |         |        |
|               |                     | through AI3)                                |         |        |
|               |                     | If the function code is 0, the water-level  |         |        |
|               |                     | signal is controlled by the digital input.  |         |        |
| F15.11        | Water level control | See 43 and 44 functions of S terminals in   | 0       | 0      |
|               |                     | group F05 for detailed information. If the  |         |        |
|               |                     | full-water signal is valid, the system will |         |        |
|               |                     | report the alarm (A-tF) and sleep after     |         |        |
|               |                     | the time of F15.14. During the alarm, the   |         |        |
|               |                     | full-water signal is invalid and the system |         |        |
|               |                     | will clear the alarm after the time of      |         |        |
|               |                     | F15.15. If the empty-water signal is valid, |         |        |
|               |                     | the system will report the alarm (A-tL)     |         |        |
|               |                     | and sleep after the time of F15.16.         |         |        |

| Function code | Name                          | Detailed illustration of parameters  | Default | Modify |
|---------------|-------------------------------|--|---------|--------|
|               |                               | During the alarm, the empty -water signal is invalid and the system will clear the alarm after the time of F15.17.  If the function code is 1~3, it is the reference of water-level control analog signal. For details, see F15.12 and F12.13.   |         |        |
| F15.12        | Full-water level<br>threshold | 0.0~100.0% This code is valid when F15.11 water level control is based on analog input. If the detected water level control analog signal is less than the water level threshold F15.12 and keeps in the state after the delay time F15.14, the system reports A-tF and sleeps.  If the delay time is not reached, the signal is bigger than the water level threshold, the time will be cleared automatically. When the measured water level control analog signal is less than the water level threshold, the delay time will be counted again.  0 is full water and 1 is no water.  During the full-water alarm, if the detected water level signal is higher than the threshold of F15.12 and the delay counts, the alarm is cleared after the time set by F15.15 is reached in this | 25.0%   | 0      |

| Function code | Name                        | Detailed illustration of parameters         | Default | Modify |
|---------------|-----------------------------|---|---------|--------|
|               |                             | continuous state continues. During the      |         |        |
|               |                             | non-continuous application, the delay       |         |        |
|               |                             | timing will clear automatically.            |         |        |
|               |                             | 0.0~100.0%                                  |         |        |
|               |                             | This code is valid when F15.11 water        |         |        |
|               |                             | level control is based on analog input.     |         |        |
|               |                             | If the detected water level control analog  |         |        |
|               |                             | signal is greater than the water level      |         |        |
|               |                             | threshold P15.13 and keeps in the state     |         |        |
|               |                             | after the delay time F15.16, the system     |         |        |
|               |                             | reports A- tL and sleeps. If the delay time | 75.0%   |        |
|               |                             | is not reached (that means                  |         |        |
|               |                             | non-continuous), the delay time is          |         |        |
|               | Empty water level           | automatically cleared. When the             |         |        |
| F15.13        | Empty-water level threshold | detected water level control analog         |         | 0      |
|               | uncanola                    | signal is less than the water level         |         |        |
|               |                             | threshold, the delay counts.                |         |        |
|               |                             | During the empty-water alarm, if the        |         |        |
|               |                             | detected water level control analog         |         |        |
|               |                             | signal is less than the water level         |         |        |
|               |                             | threshold F15.13 and delay counts, the      |         |        |
|               |                             | empty-water alarm is cleared after the      |         |        |
|               |                             | delay time set by F15.17 in this            |         |        |
|               |                             | continous state. In the non-continuous      |         |        |
|               |                             | state, the delay time is automatically      |         |        |
|               |                             | cleared.                                    |         |        |
| F15.14        | Full water delay            | 0~10000s                                    | 50      |        |
| F 15.14       | Full water delay            | Time setting of full water delay (This      | 5s      |        |

| Function code | Name                               | Detailed illustration of parameters           | Default    | Modify  |
|---------------|------------------------------------|---|------------|---------|
|               |                                    | function code is still valid when the digital |            |         |
|               |                                    | indicates the full-water signal.)             |            |         |
|               |                                    | 0~10000s                                      |            |         |
|               |                                    | Time setting of wake-up delay in              |            |         |
| F15.15        | Wake-up delay in full water state  | full-water state (This function code is still | 20s        | $\circ$ |
|               | full water state                   | valid when the digital indicates the          |            |         |
|               |                                    | full-water signal.)                           |            |         |
|               |                                    | 0~10000s                                      |            |         |
| E45.40        | Ettd-l                             | Time setting of empty-water delay (This       | <b>-</b> - |         |
| F15.16        | Empty-water delay                  | function code is still valid when the digital | 5s         |         |
|               |                                    | indicates the empty-water signal.)            |            |         |
|               |                                    | 0~10000s                                      |            |         |
|               | Wake-up delay in empty-water state | Time setting of wake-up delay in              |            |         |
| F15.17        |                                    | empty-water state (This function code is      | 20s        | 0       |
|               |                                    | still valid when the digital indicates the    |            |         |
|               |                                    | empty-water signal.)                          |            |         |
|               |                                    | 0.0~100.0%                                    |            |         |
| F15.18        | Hydraulic probe                    | 0.0%: Invalid. If it is not 0.0%, when the    | 0.0%       | 0       |
| F 15.16       | damage                             | signal is longer than P15.18, it will report  | 0.0%       | 0       |
|               |                                    | tSF fault directly and stop.                  |            |         |
|               |                                    | 0.0~3600.0s                                   |            |         |
|               |                                    | Delay time of weak light                      |            |         |
|               |                                    | If the output frequency is less than or       |            |         |
| F15.23        | Delay time of weak                 | equal to the lower limit of PI output         | 100.0s     | $\cap$  |
| F 10.23       | light                              | frequency and the state lasts for the set     |            |         |
|               |                                    | value, it will report A-LS and sleep. If the  |            |         |
|               |                                    | state is not continuous, the delay            |            |         |
|               |                                    | counting will be cleared automatically.       |            |         |

| Function code | Name                                      | Detailed illustration of parameters        | Default | Modify  |
|---------------|---|--|---------|---------|
|               |   | Note: If the bus voltage is lower than the |         |         |
|               |   | undervoltage point or the PV voltage is    |         |         |
|               |   | lower than 70V, it will report the weak    |         |         |
|               |   | light alarm without any delay time.        |         |         |
|               |   | If P15.32=0, the system will switch to the |         |         |
|               |   | power frequency input when the light is    |         |         |
|               |   | weak.                                      |         |         |
|               |   | 0.0~3600.0s                                |         |         |
|               |   | Delay time of wake-up at weak light        |         |         |
|               | Delay time of<br>wake-up at weak<br>light | If the weak light alarm is reported, after |         |         |
| P15.24        |   | the delay time of wake-up, the alarm will  | 300.0s  |         |
| F 13.24       |   | be cleared and it will run again.          |         |         |
|               |   | When F15.32=0, if the PV voltage is        |         |         |
|               |   | higher than F15.34, after the delay time,  |         |         |
|               |   | it will switch to PV input mode.           |         |         |
| P15.25        | Initial reference voltage display         | 0.0~2000.0V                                | 0       | •       |
|               |   | 0.00~1.00                                  |         |         |
|               |   | This function code is used to set the      |         |         |
|               |   | minimum voltage reference during           |         |         |
|               |   | maximum power tracking. Min. voltage       |         |         |
|               | Min. voltage                              | reference during max. power tracking =     |         |         |
| P15.26        | reference during                          | Solar cell panel open-circuit voltage *    | 0.70    | $\circ$ |
| F 15.20       | max. power                                | P15.26. Solar cell panel open-circuit      | 0.70    |         |
|               | tracking                                  | voltage = F15.25+ F15.28                   |         |         |
|               |   | Track the maximum power in the range       |         |         |
|               |   | of Min. voltage reference~F15.27.          |         |         |
|               |   | F15.27 must be greater than Min.           |         |         |
|               |   | voltage reference. The less the            |         |         |

| Function code | Name   |                                  | Detailed illu  | ustration of par   | ameters  |               | Default | Modify |
|---------------|--|----------------------------------|--|--|--|---------------|---------|--------|
|               |  | m                                | aximum vo<br>inge. F15.2   | e faster the tra<br>Itage needs to<br>6 and F15.27<br>ording to site o | be in the  | ne            |         |        |
| F15.27        | Max. voltage<br>reference during<br>max. power<br>tracking | po<br>Va<br>tra                  | ower trackir<br>alid in MPP<br>acked max.  | T Max. trackin   | g voltage, tl  | ne            | 400.0V  | 0      |
| F15.28        | Adjustment of initial reference voltage                    | m<br>re<br>In                    | eference vol   | ice voltage =P   |  |               | 5.0V    | 0      |
| F15.29        | Adjustment of upper and lower limit time of Vmppt          | W<br>ad<br>of<br>at<br>va<br>lir | djustment is it is not 0.0 Twickler will the inveral alue is the continuities of the c | , the upper an<br>be adjusted a<br>set by F15.29<br>current PV volt    | d lower limi<br>utomatically<br>. The mediu<br>age and the | :s<br>/<br>im | 1.0s    | 0      |

| Function code | Name  | Detailed illustration of parameters   | Default | Modify |
|---------------|---|---|---------|--------|
|               |   | voltage=Current PV voltge?P15.30 and it will update to F15.26 and F15.27 at the same time.  |         |        |
| F15.30        | Adjustment of upper and lower limits of Vmppt | 5.0~100.0V<br>Adjustment of the upper and lower limits  | 30.0V   | 0      |
| F15.31        | Max. value of<br>Vmppt                        | F15.27-6553.5V The upper limit cannot exceed the F15.28 when Vmppt is the maximum value. During the maximum power tracking, the upper limit of the solar cell panel reference voltage will not exceed the value set by F15.31. The factory value depends on the model. By default, the value for the -4 models is 750V and the value for other models is 400V.                          | 400.0V  | 0      |
| F15.32        | PV input and power frequency input selection  | O: Automatic shift  1: Power frequency input  2: PV input  If the value is 0, the system will switch between PV input and power frequency input according to the detected PV voltage and threshold;  If the value is 1, the system will force to switch to power frequency input;  If the value is 2, the system will force to switch to PV input.  Note: When the terminal input 42 is | 2       | •      |

| Function code | Name               | Detailed illustration of parameters         | Default | Modify |
|---------------|--------------------|---|---------|--------|
|               |                    | valid, the function code will be invalid.   |         |        |
|               |                    | 0.0V~F15.34                                 |         |        |
|               |                    | If PV voltage is lower than the threshold   |         |        |
|               |                    | or the light is weak, it can switch to      |         |        |
|               |                    | power frequency input through the relay     |         |        |
|               | Threshold to       | output.                                     |         |        |
| F15.33        | switch to power    | If the value is 0, it is invalid.           | 70.0V   | 0      |
|               | frequency input    | For inverters without the boost module,     |         |        |
|               |                    | the switching point voltage is determined   |         |        |
|               |                    | by the external voltage detection circuit.  |         |        |
|               |                    | For inverters with the boost module, the    |         |        |
|               |                    | switching point voltage is 70V.             |         |        |
|               |                    | F15.33~400.0V                               |         |        |
|               |                    | If PV voltage is greater than the           |         |        |
|               |                    | threshold, it can switch to PV input        |         |        |
|               | Thursday I day     | through the relay output after the time set |         |        |
| F15.34        | Threshold to       | by F15.24. To prevent frequent              | 100.0V  | 0      |
|               | switch to PV input | switching, this threshold must be greater   |         |        |
|               |                    | than F15.33.                                |         |        |
|               |                    | If the value is 0.0, it is invalid.         |         |        |
|               |                    | The default value depends on model.         |         |        |
|               |                    | The pump flow is $$ QN $$ if the pump runs  |         |        |
| F15.35        | Rated pump flow    | at the rated pump frequency and rated       | 0.0     | 0      |
|               |                    | lift. Unit: cubic meter/hour.               |         |        |
|               |                    | The pump lift is HN if the pump runs        |         |        |
| F15.36        | Rated pump lift    | at the rated frequency and rated current.   | 0.0     | 0      |
|               |                    | Unit: meter                                 |         |        |
| F15.37        | Voltage setting at | When the PV voltage is less than the        | 70.0    | 0      |

| Function code | Name            |                   | Detailed illustration of        | parameters           | Default | Modify |
|---------------|-----------------|-------------------|---------------------------------|----------------------|---------|--------|
|               | PV undervoltage | р                 | reset voltage, the syst         | em reports the       |         |        |
|               | point           | Р                 | V undervoltage (UV) f           | ault.                |         |        |
|               |                 | Т                 | he default value depe           | nds on the model     |         |        |
|               |                 |                   |                                 |                      |         |        |
|               |                 |                   | Model                           | PV UV<br>point       |         |        |
|               |                 |                   | -SS                             | 140V                 |         |        |
|               |                 |                   | - S                             | 140V                 |         |        |
|               |                 |                   | -2T                             | 140V                 |         |        |
|               |                 |                   | -4T                             | 240V                 |         |        |
|               |                 |                   | Any model with the boost module | 70V                  |         |        |
|               |                 | s                 | setting range: 0.0~400          | 0                    |         |        |
|               |                 | Т                 | his function code is pr         | ovided for users     |         |        |
|               |                 | to                | change models. For              | example, if the      |         |        |
|               |                 | u                 | ser wants to use mode           | el -4 (default after |         |        |
|               |                 | fa                | actory delivery) as mod         | del -2, F15.39       |         |        |
|               |                 | n                 | nust be set to 2.               |                      |         |        |
|               |                 | 0                 | : -SS 220V; single-             | phase input;         |         |        |
| F15.39        | Model           | s                 | ingle-phase output              |                      | 0       | 0      |
| 1 10.00       | Wiodoi          | 1                 | : -S 220V; single-pl            | nase input;          |         |        |
|               |                 | tŀ                | nree-phase output               |                      |         |        |
|               |                 | 2                 | : -2T 220V; three-pha           | se input;            |         |        |
|               | tŀ              | nree-phase output |                                 |                      |         |        |
|               |                 | 3                 | : -4T 380V; three-pha           | se input;            |         |        |
|               |                 | tŀ                | rree-phase output               |                      |         |        |
|               |                 | S                 | Setting range: 0~3              |                      |         |        |
| F17 Group     | State viewing   | 1                 |                                 |                      | I       |        |
| F17.38        | Current of the  | It                | is the current of the m         | ain winding when     | 0.0A    |        |

| Function code | Name                           | Detailed illustration of parameters        | Default | Modify |
|---------------|--------------------------------|--|---------|--------|
|               | main winding                   | applying capacitance-removing to control   |         |        |
|               |                                | the single phase motor.                    |         |        |
|               |                                | 0.00~100.00A                               |         |        |
|               |                                | It is the current of the secondary winding |         |        |
| E17.00        | Current of the                 | when applying capacitance-removing to      | 0.04    |        |
| F17.39        | secondary winding              | control the single phase motor.            | 0.0A    |        |
|               |                                | 0.00~100.00A                               |         |        |
| F18 Group     | State viewing spec             | cial for solar converters                  |         |        |
|               |                                | MPPT is implemented at the converter       |         |        |
| F18.00        | PV reference                   | side. This value is determined at the      |         | •      |
|               | voltage                        | converter side.                            |         |        |
| <b>510.01</b> | Current PV                     | It is transferred from the boost module or |         |        |
| F18.01        | F18.01 voltage                 | equal to the bus voltage.                  |         |        |
|               |                                | The value displays the minimum voltage     |         |        |
| E40.00        | Display of MPPT min. reference | reference during maximum power             |         |        |
| F18.02        | voltage                        | tracking. It equals the solar cell panel   |         |        |
|               |                                | open-circuit voltage multiplied F15.26.    |         |        |
|               |                                | It is transferred from the boost module.   |         |        |
| F18.04        | Current inductive current      | This function code is valid only in AC     |         | •      |
|               | current                        | mode and invalid in PV mode.               |         |        |
| F18.07        | PV input power                 | Reserved. Unit: kW                         |         |        |
| F18.08        | Previous PV input power        | Reserved                                   |         | •      |
| F18.09        | Previous PV<br>voltage         | Reserved                                   |         | •      |
|               | Device                         | 0x00~0x11                                  |         |        |
| F18.10        | configuration                  | Ones on LED                                |         |        |
|               | display                        | 0: PV power supply                         |         |        |

| Function code | Name                       | Detailed illustration of parameters         | Default | Modify |
|---------------|----------------------------|---|---------|--------|
|               |                            | 1: AC grid power supply                     |         |        |
|               |                            | Tens on LED                                 |         |        |
|               |                            | 0: Detection indicates the system           |         |        |
|               |                            | contains the boost module.                  |         |        |
|               |                            | 1: Detection indicates the system does      |         |        |
|               |                            | not contain the boost module.               |         |        |
| F18.11        | Current pump flow          | Unit: cubic meter/hour                      | 0.0     | •      |
| F18.12        | Current pump lift          | Unit: meter                                 | 0.0     | •      |
|               |                            | This function code displays the 16 most     |         |        |
| F18.13        | MSBs in total pump<br>flow | significant bits (MSBs) in the total pump   | 0       | •      |
|               | now                        | flow. Unit: cubic meter                     |         |        |
|               |                            | This function code displays the 16 least    |         |        |
| E40.44        | LSBs in total pump         | significant bits (LSBs) in the total pump   | 0.0     |        |
| F18.14        | flow                       | flow. Unit: cubic meter. Total pump flow =  |         |        |
|               |                            | F18.13*65535+ F18.14                        |         |        |
|               |                            | Setting this value to 1 can reset the total |         |        |
|               | T-1-1 0 -                  | pump flow. F18.13 and F18.14 will           |         |        |
| F18.15        | Total pump flow resetting  | accumulate the flow after resetting. After  | 0       | 0      |
|               | resetting                  | the resetting succeeds, F18.15 is           |         |        |
|               |                            | automatically set to 0.                     |         |        |
| F19 Group     | Voltage boost (cor         | nverter module communicates with boost r    | nodule  |        |
| through 485)  | r                          |   | 1       | 1      |
| F19.00        | Boost voltage loop<br>KP   | 0.000~65.535                                | 0.500   | 0      |
| F19.01        | Boost voltage loop<br>KI   | 0.000~65.535                                | 0.080   | 0      |
| F19.02        | Boost current loop<br>KP   | 0.000~65.535                                | 0.010   | 0      |
| F19.03        | Boost current loop         | 0.000~65.535                                | 0.010   | 0      |

| Function code | Name  | Detailed illustration of parameters   | Default | Modify |
|---------------|---|---|---------|--------|
|               | KI  |   |         |        |
| F19.04        | Upper limit of the output current of boost voltage loop | Upper limit output of mppt voltage loop PI, upper limit of the boost current loop reference current F19.05~15.0A  | 12.0A   | 0      |
| F19.06        | Bus reference<br>voltage                                | This function code is set to the bus reference voltage at PV input when the system contains the boost module. By default, this function code is set to 350V for models of 220V and 570V for models of 380V.  Setting range: 300.0V~600.0V                             | 350.0V  | 0      |
| F19.07        | Boost voltage loop<br>KP1                               | If the difference between the bus reference voltage and actual bus voltage is greater than 20V, the boost voltage loop uses this group PI parameter.  Otherwise, the boost voltage loop uses the first group PI parameter.  Setting range: 0.000~65.535               | 0.500   | 0      |
| F19.08        | Boost voltage loop<br>KI1                               | If the difference between the bus reference voltage and actual bus voltage is greater than 20V, the boost voltage loop uses the PI parameters of this group. Otherwise, the boost voltage loop uses the PI parameters of the first group. Setting range: 0.000~65.535 | 0.080   | 0      |
| F19.10        | Boost software version                                  | Once being powered, the boost module sends its version information to the   | 0.00    | •      |

| Function code | Name | Detailed illustration of parameters | Default | Modify |
|---------------|------|-------------------------------------|---------|--------|
|               |      | converter module.                   |         |        |

#### Note:

- I The time when the pump inverter operated to the lower limit of PI output frequency after inverter start-up is determined by the ACC time.
- Delay time counting follows the rules if multiple fault conditions are met simutaneously: For example, if all fault conditions of weak light, full water, and underload are met at the same time, the inverter will count the delay time for each fault independently. If the delay time of a fault is reached, the fault is reported. The delay time counting of the other two faults keeps. If the reported fault is resolved but the conditions of the other two faults persist, the delay time counting of the other two faults continues. If a fault condition is not met during counting, the delay time of this fault is cleared.

# 7 Fault diagnosis and solution

Do as follows after the inverter encounters a fault:

- Check to ensure there is nothing wrong with the keypad. If not, please contact with the local Souer office.
- 2. If there is nothing wrong, please check F07 and ensure the corresponding recorded fault parameters to confirm the real state when the current fault occurs by all parameters.
- 3. See the following table for detailed solution and check the corresponding abnormal state.
- 4. Eliminate the fault and ask for relative help.
- 5. Check to eliminate the fault and carry out fault reset to run the inverter.

| Fault code | Fault type  | Possible cause  | Solutions  |  |  |
|------------|---|---|--|--|--|
| OUt1       | IGBT U  | 1. The acceleration is too fast.  |  |  |  |
| OUt2       | IGBT V  | This phase IGBT is damaged internally.  | Increase the acceleration  |  |  |
| OUt3       | IGBT W  | 3. Interference causes misoperation. 4. The drive wire is connected improperly. 5. The load transients or is abnormal. 6. The grounding is short circuited. | time.  2. Change the power unit.  3. Check the drive wire.  4. Check whether the peripheral equipment has strong interference sources. |  |  |
| OV1        | Overvoltage when acceleration   |   | Check the input power.     Check if the DEC time of the load is too short or the inverter.   |  |  |
| OV2        | Overvoltage when deceleration  1. The input voltage is abnormal. 2. There is large energy |   | starts during the rotation of the motor or it needs to increase the  |  |  |
| OV3        | Overvoltage when constant speed running   | feedback.  3. No braking components.  4. Braking energy is not open.  | energy consumption components. 3. Install the braking components. 4. Check the setting of relative function codes.                     |  |  |
| OC1        | Overcurrent when acceleration   | The acceleration or deceleration is too fast.     The voltage of the grid is  | Increase the ACC time.     Check the input power.     Select the investor with a   |  |  |
| OC2        | Overcurrent when deceleration   | The voltage of the grid is too low.     The power of the inverter is  | Select the inverter with a larger power.     Check if the load is short  |  |  |

| Fault code | Fault type                              | Possible cause  | Solutions   |
|------------|---|---|---|
| OC3        | Overcurrent when constant speed running | too low. 4. The load transients or is abnormal. 5. The grounding is short circuited or the output is phase loss. 6. There is strong external interference. 7. The overvoltage stall protection is not open. | circuited (the grounding short circuited or the wire short circuited) or the rotation is not smooth.  5. Check the output configuration.  6. Check if there is strong interference.  7. Check the setting of relative function codes. |
| UV         | Bus undervoltage                        | The voltage of the power supply is too low.     The overvoltage stall protection is not open.   | Check the input power of the supply line.     Check the setting of relative function codes.   |
| OL1        | Motor overload                          | The voltage of the power supply is too low.     The motor setting rated current is incorrect.     The motor stall or load transients is too strong.   | Check the power of the supply line.     Reset the rated current of the motor.     Check the load and adjust the torque lift.  |
| OL2        | Inverter overload                       | The acceleration is too fast.     The rotating motor is reset.     The voltage of the power supply is too low.     The load is too heavy.     The motor power is too small.                                 | Increase the ACC time.     Avoid the restarting after stopping.     Check the power of the supply line.     Select an inverter with bigger power.     Select a proper motor.  |
| SPI        | Input phase loss                        | Phase loss or fluctuation of input R,S,T  | <ol> <li>Check input power.</li> <li>Check installation distribution.</li> </ol>  |
| SPO        | Output phase loss                       | U,V,W phase loss output (or<br>serious asymmetrical three<br>phase of the load)   | Check the output distribution.     Check the motor and cable.   |
| OH1        | Rectifier overheat                      | 1. Air duct jam or fan damage   | Dredge the wind channel or  |

| Fault code | Fault type              | Possible cause   | Solutions   |
|------------|-------------------------|--|---|
| OH2        | IGBT overheat           | Ambient temperature is too high.     The time of overload running is too long.   | change the fan.  2. Decrease the environment temperature.   |
| EF         | External fault          | SI external fault input terminals action   | Check the external device input.  |
| CE         | Communication<br>error  | 1. The baud rate setting is incorrect. 2. Fault occurs to the communication wiring. 3. The communication address is wrong. 4. There is strong interference to the communication.   | Set proper baud rate.     Check the communication connection distribution     Set proper communication address.     Change or replace the connection distribution or improve the anti-interference capability.                                      |
| ItE        | Current detection fault | The connection of the control board is not good.     Assistant power is bad     Hall components is broken     The magnifying circuit is abnormal.  | Check the connector and repatch.     Change the Hall.     Change the main control panel.  |
| tE         | Autotuning fault        | The motor capacity does not comply with the inverter capability.     The rated parameter of the motor is not set correctly.     The offset between the parameters from autotune and the standard parameter is huge     Autotune overtime | 1. Change the inverter mode. 2. Set the rated parameter according to the motor name plate. 3. Empty the motor load. 4. Check the motor connection and set the parameter. 5. Check if the upper limit frequency is above 2/3 of the rated frequency. |
| EEP        | EEPROM fault            | Error of controlling the write and read of the parameters     Damage to EEPROM   | Press STOP/RST to reset.     Change the main control panel.   |
| PIDE       | PID feedback fault      | PID feedback is offline.   | Check the PID feedback signal   |

| Fault code | Fault type                      | Possible cause  | Solutions  |
|------------|---------------------------------|---|--|
|            |                                 | The PID feedback source disappears.   | 2. Check the PID feedback source.  |
| END        | Time arrival of factory setting | The actual running time of the inverter is above the internal setting running time.   | Ask for the supplier and adjust the setting running time.  |
| OL3        | Electrical overload             | The inverter will report overload pre-alarm according to the set value.   | Check the load and the overload pre-alarm point.   |
| ETH1       | Grounding short circuit fault 1 | The grounding of the inverter output terminal is short  | Check whether the motor wiring   |
| ETH2       | Grounding short circuit fault 2 | circuited. The current detection circuit is faulty. The actual motor power sharply differs from the inverter power.   | is proper. Change the Hall. Change the main control panel. Set motor parameters correctly.   |
| DEU        | Velocity deviation fault        | The load is too heavy or stalled.   | Check the load and ensure it is normal. Increase the detection time.     Check whether the control parameters are normal.                              |
| STO        | Maladjustment fault             | The control parameters of the synchronous motors not set properly.     The autotuning parameter is not correct.     The inverter is not connected to the motor. | Check the load and ensure it is normal.     Check whether the control parameter is set properly or not.     Increase the maladjustment detection time. |
| LL         | Electronic<br>underload fault   | The inverter will report the underload pre-alarm according to the set value.  | Check the load and the underload pre-alarm point.  |
| TSF        | Hydraulic probe<br>damage       | Hydraulic probe damage  | Change the damaged hydraulic probe.  |

| Fault code | Fault type  | Possible cause   | Solutions  |  |  |
|------------|---|--|--|--|--|
| PINV       | PV reverse connection fault                             | Incorrect PV wiring  | Change the wiring direction of the positive and negative terminals and connect the cables again.   |  |  |
| PVOC       | PV overcurrent  | 1. The acceleration or deceleration is too fast. 2. The inverter power is too low. 3. The load transients or is abnormal. 4. The grounding is short circuited. | Increase the ACC or DCC time.     Select the inverter with a larger power.     Check if the load is short circuited (the grounding short circuited or the wire short circuited) or the rotation is not smooth. |  |  |
| PVOV       | PV overvoltage  | The solar cell panel input voltage is too high.     Model -4 is set as another model.  | Reduce the number of solar cell panels that are wired in series.     Check and reset the model.  |  |  |
| PVLV       | PV undervoltage   | The power of the solar cell panel series is too low or it is cloudy and rainy weather.     The motor start-up current is too high.                             | Increase the number of solar cell panels or perform the test in the normal sun light.     Change the motor.  |  |  |
| E-422      | Fault on communication with boost module 422            | Improper contact with the communication cables   | Check the four communication cables of 422 and ensure that they are connected properly.  |  |  |
| OV         | Bus overvoltage<br>detected at the<br>boost module side | The sun light changes suddenly.  | Adjust the boost PI parameters.<br>Enlarge the values of F19.07<br>and F19.08.   |  |  |
| A-LS       | Weak light alarm  | The sun light is weak or the solar cell panel configuration is insufficient.   | The equipment automatically runs when the light becomes strong. Check whether the solar cell   |  |  |

| Fault code | Fault type   | Possible cause          | Solutions  |  |  |
|------------|--|-------------------------|--|--|--|
|            |  |                         | panel configuration is proper.   |  |  |
| A-LL       | Underload alarm  | The reservoir is empty. | Check the reservoir.   |  |  |
|            |  |                         | If the user has set the full-water   |  |  |
|            |  |                         | alarm function, the equipment  |  |  |
|            |  |                         | automatically stops when the   |  |  |
|            | TF Full-water alarm The reservoir is full. specified tir the user do perform any |                         | full-water alarm time reaches the  |  |  |
| A-TF       |  | The reservoir is full.  | specified time. In this situation,   |  |  |
|            |  | İ                       | the user does not need to  |  |  |
|            |  | perform any operation.  |  |  |  |
|            |  |                         | Otherwise, check whether   |  |  |
|            |  |                         | terminals are wired incorrectly.   |  |  |
|            |  |                         | If the user has set the  |  |  |
|            |  |                         | panel configuration is proper.  Check the reservoir.  If the user has set the full-water alarm function, the equipment automatically stops when the full-water alarm time reaches the specified time. In this situation, the user does not need to perform any operation.  Otherwise, check whether terminals are wired incorrectly.   |  |  |
|            |  |                         |  |  |  |
|            |  |                         | when the empty-water alarm   |  |  |
| A-TL       | Empty-water alarm  | The reservoir is empty. | panel configuration is proper.  Check the reservoir.  If the user has set the full-water alarm function, the equipment automatically stops when the full-water alarm time reaches the specified time. In this situation, the user does not need to perform any operation.  Otherwise, check whether terminals are wired incorrectly.  If the user has set the empty-water alarm function, the equipment automatically stops when the empty-water alarm time reaches the specified time. In this situation, the user does not need to perform any operation. Otherwise, check whether terminals are wired |  |  |
| A-IL       | Empty water alarm  | The reservoir is empty. | In this situation, the user does   |  |  |
|            |  |                         | not need to perform any  |  |  |
|            |  |                         | operation. Otherwise, check  |  |  |
|            |  |                         | whether terminals are wired  |  |  |
|            |  |                         | incorrectly.   |  |  |

Appendix A Options and use

#### A 1 Cables

#### A.1.1 Power cables

Dimension the input power and motor cables according to local regulations.

Note: A separate PE conductor is required if the conductivity of the cable shield is not sufficient for the purpose.

#### A.1.2 Control cables

The relay cable needs the cable type with braided metallic screen.

Keypads need to be connected with network cables. The network cables must be shielded in complicated electromagnetic environments.

Communication cables must be shielded twisted pairs.

#### Note:

- Run analog and digital signals in separate cables.
- I Check the insulation of the input power cable according to local regulations before connecting to the drive.

Recommended power cables for standard inverter models

| Model          | Recommended cable (mm²)  (+)/(-), R/S/T, U/V/W | size<br>PE | Terminal<br>screw | Tightening<br>torque<br>(Nm) |
|----------------|--|------------|-------------------|------------------------------|
| PV100 -0R4G-S  | 1.5  | 1.5        | M4                | 0.8                          |
| PV100 -0R7G-S  | 1.5  | 1.5        | M4                | 0.8                          |
| PV100 -0R4G-SS | 1.5  | 1.5        | M4                | 0.8                          |
| PV100 -0R7G-4T | 1.5  | 1.5        | M4                | 0.8                          |
| PV100 -1R5G-4T | 1.5  | 1.5        | M4                | 0.8                          |
| PV100 -2R2G-4T | 1.5  | 1.5        | M4                | 0.8                          |
| PV100 -1R5G-S  | 2.5  | 2.5        | M4                | 0.8                          |
| PV100 -2R2G-S  | 2.5  | 2.5        | M4                | 0.8                          |
| PV100-0R7G-SS  | 2.5  | 2.5        | M4                | 0.8                          |
| PV100-1R5G-SS  | 2.5  | 2.5        | M4                | 0.8                          |
| PV100 -2R2G-SS | 2.5  | 2.5        | M4                | 0.8                          |
| PV100-004G-SS  | 2.5  | 2.5        | M4                | 1.2~1.5                      |
| PV100-5R5G-SS  | 2.5  | 2.5        | M4                | 1.2~1.5                      |
| PV100 -004G-4T | 2.5  | 2.5        | M4                | 1.2~1.5                      |

| Model          | Recommended cable s |     |     | Tightening<br>torque<br>(Nm) |
|----------------|---------------------|-----|-----|------------------------------|
| PV100 -5R5G-4T | 2.5                 | 2.5 | M4  | 1.2~1.5                      |
| PV100 -7R5G-4T | 4                   | 4   | M5  | 2~2.5                        |
| PV100-004G-2T  | 4                   | 4   | M5  | 2~2.5                        |
| PV100 -011G-4T | 6                   | 6   | M5  | 2~2.5                        |
| PV100 -5R5G-2T | 6                   | 6   | M5  | 2~2.5                        |
| PV100-015G-4T  | 10                  | 10  | M5  | 2~2.5                        |
| PV100 -7R5G-2T | 10                  | 10  | M5  | 2~2.5                        |
| PV100-018G-4T  | 16                  | 16  | M5  | 2~2.5                        |
| PV100-022G-4T  | 25                  | 16  | M5  | 2~2.5                        |
| PV100-030G-4T  | 25                  | 16  | M6  | 4~6                          |
| PV100-037G-4T  | 35                  | 35  | M6  | 4~6                          |
| PV100-045G-4T  | 50                  | 35  | M8  | 9~11                         |
| PV100-055G-4T  | 70                  | 35  | M10 | 18~23                        |
| PV100-075G-4T  | 95                  | 50  | M10 | 18~23                        |
| PV100-090G-4T  | 120                 | 70  | M10 | 18~23                        |
| PV100-110G-4T  | 150                 | 70  | M12 | 31~40                        |

### Note:

It is appropriate to use the recommended cable size under  $40^{\circ}\text{C}$  and rated current. The wiring distance should be no more than 100m.

If the control cable and power cable must cross, the angle between them must be  $90^{\circ}\text{C}$ .

If the inside of the inverter is moist, the insulation resistance will decrease. If there is moisture in the inverter, dry up the inverter and measure the humidity again.

#### A.2 Reactors

If the distance between the inverter and the motor is longer than 50m, frequent overcurrent protection may occur to the inverter because of high leakage current caused by parasitic capacitance effects from the long cables to the ground. In order to avoid the damage of the motor insulation, it is necessary to add reactor compensation. If the distance between the inverter and motor is 50~100m, see the table below for model selection; if it exceeds 100m, consult with Suoer technical support

Note: The rated derate voltage of the output reactor is 1%±15%.


# Appendix B Recommended solar modules


# B.1 Recommended configuration for solar pumping inverters

|                                 | Open circuit voltage | degree of solar module             |  |  |
|---------------------------------|----------------------|------------------------------------|--|--|
| Color numping invertor          | 37±1V                |                                    |  |  |
| Solar pumping inverter<br>model | Module<br>power±5Wp  | Modules per<br>string *<br>strings |  |  |
| PV100-0R4G-SS                   | 330                  | 11*1                               |  |  |
| PV100-0R7G-SS                   | 330                  | 11*1                               |  |  |
| PV100-1R5G-SS                   | 330                  | 11*1                               |  |  |
| PV100 -2R2G-SS                  | 330                  | 11*1                               |  |  |
| PV100 -0R4G-S                   | 330                  | 11*1                               |  |  |
| PV100 -0R7G-S                   | 330                  | 11*1                               |  |  |
| PV100 -1R5G-S                   | 330                  | 11*1                               |  |  |
| PV100 -2R2G-S                   | 330                  | 11*1                               |  |  |
| PV100 -004G-2T                  | 330                  | 11*2                               |  |  |
| PV100-5R5G-2T                   | 330                  | 11*2                               |  |  |
| PV100-7R5G-2T                   | 330                  | 11*3                               |  |  |
| PV100-0R7G-4T                   | 330                  | 18*1                               |  |  |
| PV100-1R5G-4T                   | 330                  | 18*1                               |  |  |
| PV100-2R2G-4T                   | 330                  | 18*1                               |  |  |
| PV100-004G-4T                   | 330                  | 18*1                               |  |  |
| PV100-5R5G-4T                   | 330                  | 18*2                               |  |  |
| PV100-7R5G-4T                   | 330                  | 18*2                               |  |  |
| PV100 -011G-4T                  | 330                  | 18*2                               |  |  |
| PV100 -015G-4T                  | 330                  | 18*3                               |  |  |
| PV100 -018G-4T                  | 330                  | 18*3                               |  |  |
| PV100 -022G-4T                  | 330                  | 18*4                               |  |  |
| PV100-030G-4T                   | 330                  | 18*5                               |  |  |
| PV100 -037G-4T                  | 330                  | 18*6                               |  |  |

# Appendix C Dimension drawings

# C.1 Dimensions of 4-37kW models

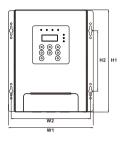

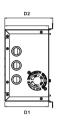

(a) Wall mounting

### Dimensions in wall mounting (unit: mm)

| Model          | W1  | W2    | H1    | H2  | D1    | D2  | Installation hole (d) |
|----------------|-----|-------|-------|-----|-------|-----|-----------------------|
| PV100 -0R4G-SS | 210 | 196.8 | 253.2 | 150 | 108.1 | 119 | 5                     |
| PV100 -0R7G-SS | 210 | 196.8 | 253.2 | 150 | 108.1 | 119 | 5                     |
| PV100 -1R5G-SS | 210 | 196.8 | 253.2 | 150 | 108.1 | 119 | 5                     |
| PV100 -2R2G-SS | 210 | 196.8 | 253.2 | 150 | 108.1 | 119 | 5                     |
| PV100 -0R4G-S  | 210 | 196.8 | 253.2 | 150 | 108.1 | 119 | 5                     |
| PV100-0R7G-S   | 210 | 196.8 | 253.2 | 150 | 108.1 | 119 | 5                     |
| PV100 -1R5G-S  | 210 | 196.8 | 253.2 | 150 | 108.1 | 119 | 5                     |
| PV100 -2R2G-S  | 210 | 196.8 | 253.2 | 150 | 108.1 | 119 | 5                     |
| PV100 -0R7G-4T | 210 | 196.8 | 253.2 | 150 | 108.1 | 119 | 5                     |
| PV100 -1R5G-4T | 210 | 196.8 | 253.2 | 150 | 108.1 | 119 | 5                     |
| PV100 -2R2G-4T | 210 | 196.8 | 253.2 | 150 | 108.1 | 119 | 5                     |

### Dimensions in wall mounting (unit: mm)

| Model           | W1  | W2  | H1    | H2    | D1    | D2    | Installation |
|-----------------|-----|-----|-------|-------|-------|-------|--------------|
|                 |     |     |       |       |       |       | hole (d)     |
| PV100-004G-4T   | 272 | 160 | 319.8 | 350.8 | 142.8 | 142.8 | 5            |
| PV100 -5R5G-4T  | 272 | 160 | 319.8 | 350.8 | 142.8 | 142.8 | 5            |
| PV100 -7R5G-4T  | 320 | 160 | 400   | 412.8 | 177.5 | 177.5 | 6            |
| PV100 -011 G-4T | 320 | 160 | 400   | 412.8 | 177.5 | 177.5 | 6            |
| PV100-015G-4T   | 320 | 160 | 400   | 412.8 | 177.5 | 177.5 | 6            |
| PV100-004G-2T   | 320 | 160 | 400   | 412.8 | 177.5 | 177.5 | 6            |
| PV100 -5R5G-2T  | 320 | 160 | 400   | 412.8 | 177.5 | 177.5 | 6            |
| PV100 -7R5G-2T  | 320 | 160 | 400   | 412.8 | 177.5 | 177.5 | 6            |
| PV100-018G-4T   | 320 | 160 | 400   | 412.8 | 177.5 | 177.5 | 6            |
| PV100-022 G-4T  | 302 | 235 | 443   | 456   | 219.7 | 219.7 | 6            |
| PV100-030 G-4T  | 302 | 235 | 443   | 456   | 219.7 | 219.7 | 6            |
| PV100-037 G-4T  | 302 | 235 | 443   | 456   | 219.7 | 219.7 | 6            |

# Appendix D Further information

### D.1 Product and service inquiries

Address any inquiries about the product to your local Souer offices, quotingthe type designation and serial number of the unit in question. A listing of Souer sales, support and service contacts can be found by navigating to <a href="Web:www.chinasuoer.com">Web:www.chinasuoer.com</a>

#### B.2 Feedback of Souer Inverters manuals

Your comments on our manuals are welcome. Go to <a href="Web:www.chinasuoer.com">Web:www.chinasuoer.com</a> and select Online Feedback of Contact Us.

### B.3 Document library on the Internet

You can find manuals and other product documents in PDF format on the Internet. Go to Web:www.chinasuoer.com and select Service and Support of Document Download.

Ver:1.1



Web:www.chinasuoer.com

The products are owned by Foshan Suoer Electronic Industry Co., Ltd

Manufacturer : Foshan Suoer Electronic Industry Co.,Ltd Add : Suoer Industrial Park, Yanfeng Road, Dali, Nanhai District, Foshan City, Guangdong Province, China.

MADE IN CHINA







WeChat

SOUER Copyright.

Information may be subject to change without notice during product improving.